


# HEATHKIT<sup>®</sup> MANUAL

*for the*

**AC POWER SUPPLY**

**Model HWA-2036-3**

595-1943

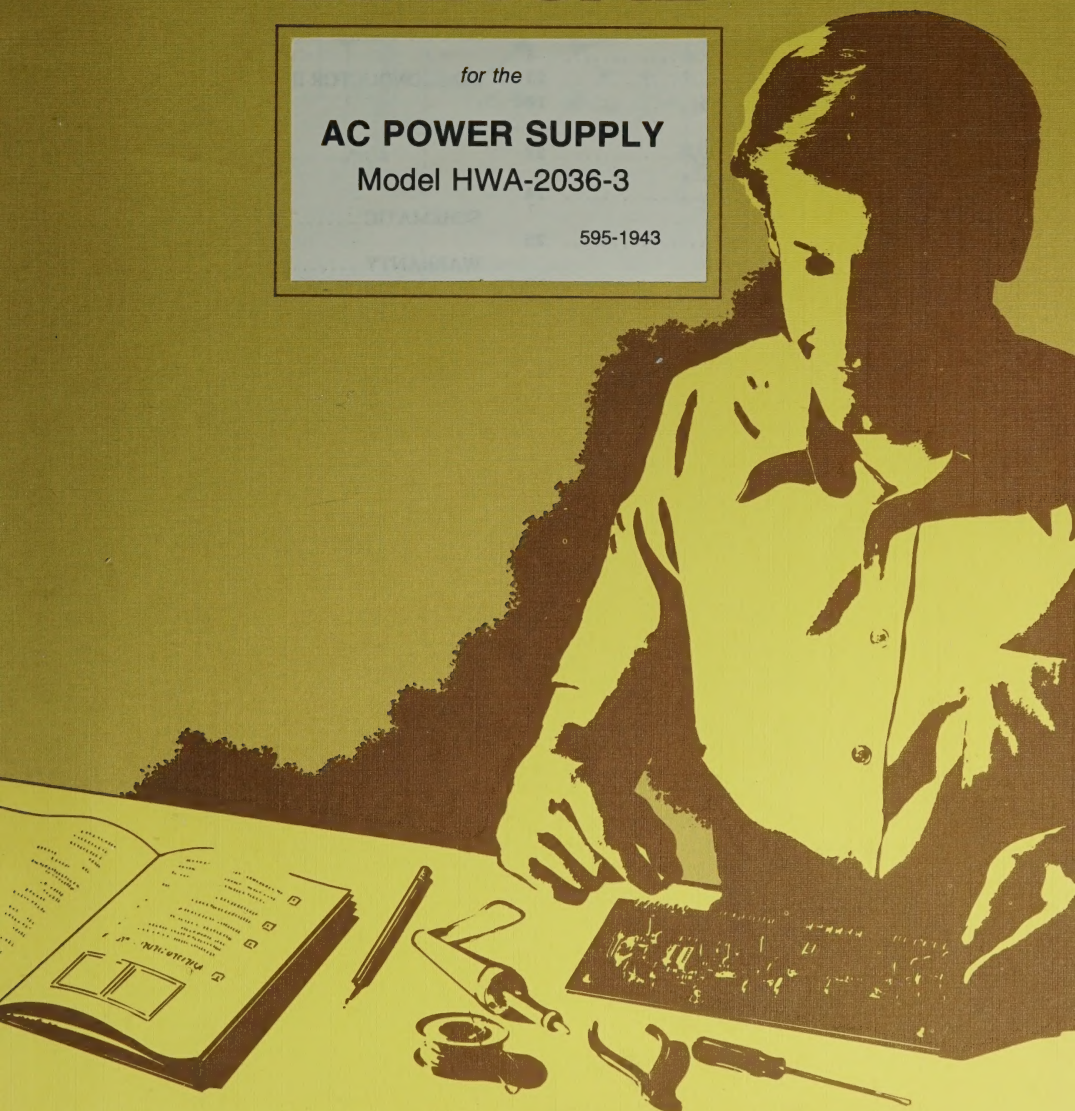


HEATH COMPANY • BENTON HARBOR, MICHIGAN

## HEATH COMPANY PHONE DIRECTORY

The following telephone numbers are direct lines to the departments listed:

Kit orders and delivery information .....	(616) 982-3411
Credit .....	(616) 982-3561
Replacement Parts .....	(616) 982-3571
<i>Technical Assistance:</i>	
R/C, Audio, and Electronic Organs .....	(616) 982-3310
Amateur Radio .....	(616) 982-3296
Test Equipment, Strobe Lights, Calculators, Clocks, Weather Instruments .....	(616) 982-3315
Television .....	(616) 982-3307
Automotive, Marine, Appliances, Security, General Products .....	(616) 982-3496

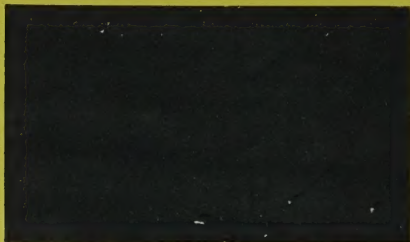

### YOUR HEATHKIT 90-DAY FULL WARRANTY

During your first ninety (90) days of ownership, Heath Company will replace or repair free of charge — as soon as practical — any parts which are defective, either in materials or workmanship. You can obtain parts directly from Heath Company by writing us or telephoning us at (616) 982-3571. And we'll pay shipping charges to get those parts to you — anywhere in the world.

We warrant that, during the first ninety (90) days of ownership, our products, when correctly assembled, calibrated, adjusted, and used in accordance with our printed instructions, will meet published specifications.

If a defective part or error in design has caused your Heathkit product to malfunction during the warranty period, through no fault of yours, we will service it free upon delivery at your expense to the Heath factory, Benton Harbor, Michigan, or to any Heathkit Electronic Center (units of Schlumberger Products Corporation), or through any of our authorized overseas distributors.

You will receive free consultation on any problem you might encounter in the assembly or use of your Heathkit product. Just drop us a line or give us a call. Sorry, we cannot accept collect calls.

Our warranty, both expressed and implied, does not cover damage caused by use of corrosive solder, defective tools, incorrect assembly, misuse, fire, customer-made modifications, flood or acts of God, nor does it include reimbursement for customer assembly or setup time. The warranty covers only Heath products and is not extended to non-Heath allied equipment or components used in conjunction with our products or uses of our products for purposes other than as advertised.

And if you are dissatisfied with our service — warranty or otherwise — or our products, write directly to our Director of Customer Services, Heath Company, Benton Harbor, Michigan, 49022. He'll make certain your problems receive immediate, personal attention.

HEATH COMPANY  
BENTON HARBOR, MI. 49022

Prices and specifications subject to change without notice.



# Heathkit® Manual

*for the*

## AC POWER SUPPLY

Model HWA-2036-3

595-1943

HEATH COMPANY  
BENTON HARBOR, MICHIGAN 49022

Copyright © 1976  
Heath Company  
All Rights Reserved  
Printed in the United States of America

## TABLE OF CONTENTS

PARTS LIST .....	3	SPECIFICATIONS .....	28
ASSEMBLY NOTES .....	5	CIRCUIT DESCRIPTION .....	29
STEP-BY-STEP ASSEMBLY		CIRCUIT BOARD X-RAY VIEW .....	30
Circuit board assembly .....	8	SEMICONDUCTOR IDENTIFICATION CHART	31
Chassis Assembly .....	13		
Wiring .....	18		
TESTS AND ADJUSTMENTS .....	22		
FINAL ASSEMBLY .....	24	SCHEMATIC..... In the Illustration Booklet	
OPERATION .....	25	WARRANTY .....	Inside front cover
IN CASE OF DIFFICULTY .....	26	CUSTOMER SERVICE.....	Inside rear cover
Troubleshooting Chart.....	27		

## PARTS LIST

Unpack the kit and check each part against the following list. The parts may vary slightly from the illustrations. The key numbers correspond to the numbers in the Parts Pictorial (Illustration Booklet, Page 1). Return any part that is packed in an individual envelope, with the part number on it back into the envelope, after you identify it, until it is called for in a step. Do not throw away any packing material until you account for all the parts.

Each circuit part has its own "Circuit Component Number" (R1, C3, Q2, etc.). This is a specific number for only that one part. The purpose of these numbers is to help you identify the same part in each section of this Manual. These numbers, which are especially useful if a part has to be replaced, appear:

- In the Parts List,

- At the beginning of each step where you install a component,
- In some illustrations,
- In the sections at the rear of this Manual,
- In the Schematic Diagram.

To order a replacement part, always include the part number and use the Parts Order Form furnished with this kit. If a Parts Order Form is not available, use one of the Parts Order Forms at the rear of this Manual, or refer to "Replacement Parts" inside the rear cover. Your Warranty is inside the front cover. For prices, refer to the separate "Heath Parts Price List."

KEY No.	HEATH Part No.	QTY.	DESCRIPTION	CIRCUIT Comp. No.
---------	----------------	------	-------------	-------------------

### RESISTORS

NOTE: The following resistors have a tolerance of 10% unless otherwise noted. 10% is indicated by a fourth color band of silver; 5% is indicated by a gold fourth band.

A1	1-49	1	22 $\Omega$ , 1/2-watt (red-red-black)	R2 ✓
A1	1-9	1	1000 $\Omega$ , 1/2-watt (brown-black-red)	R6 ✓
A1	1-138	1	3900 $\Omega$ , 1/2-watt, 5% (orange-white-red)	R5 ✓
A1	1-51	1	6800 $\Omega$ , 1/2-watt, 5% (blue-gray-red)	R3 ✓
A1	1-22	1	22 k $\Omega$ , 1/2-watt (red-red-orange)	R1 ✓

### CAPACITORS

B1	27-47	2	.1 $\mu$ F Mylar*	C3, C4 ✓
B2	25-121	1	500 $\mu$ F electrolytic	C2 ✓
B2	25-198	1	3500 $\mu$ F electrolytic	C1 ✓

KEY No.	HEATH Part No.	QTY.	DESCRIPTION	CIRCUIT Comp. No.
---------	----------------	------	-------------	-------------------

### DIODES — TRANSISTORS — INTEGRATED CIRCUIT (IC)

C1	57-27	1	1N2071 diode	D5 ✓
C1	57-71	4	S-5A05 diode	D1, D2, D3, D4 ✓

NOTE: Transistors and integrated circuits may be marked for identification in any of the following four ways:

1. Part number.
2. Type number. (On integrated circuits, this refers only to the numbers; the letters may be different or missing.)
3. Part number and type number.
4. Part number with a type number other than the one listed.

D1	417-215	1	2N3055 transistor	Q2 ✓
D2	417-224	1	MPSU05 transistor	Q1 ✓
D3	442-626	1	UA78MGT4C integrated circuit	IC1 ✓



KEY	HEATH	QTY.	DESCRIPTION	CIRCUIT
No.	Part No.			Comp. No.

## OTHER ELECTRONIC COMPONENTS

E1	10-918	1	500 $\Omega$ control	R4 ✓
E2	63-269	1	Switch	SW1 ✓
E3	412-15	1	Neon lamp	PL1 ✓
E4	421-2	1	3-ampere fuse	F2 ✓
E4	421-29	1	3/4-ampere, slow-blow fuse	F1 ✓
	54-935	1	Power transformer	T1 ✓

## HARDWARE

F1	250-170	12	#6 $\times$ 1/4" sheet metal screw
F2	250-89	7	6-32 $\times$ 3/8" screw
F3	250-206	2	6-32 $\times$ 11/16" screw
F4	252-3	5	6-32 nut
F5	254-1	9	#6 lockwasher
F6	254-6	1	#6 external tooth lockwasher
F7	259-1	1	#6 solder lug
F8	255-11	2	6-32 threaded spacer
F9	250-137	4	8-32 $\times$ 3/8" screw
F10	250-72	1	8-32 $\times$ 3/4" screw
F11	252-4	5	8-32 nut
F12	252-28	1	8-32 thumbnut
F13	253-45	2	#8 flat washer
F14	254-2	5	#8 lockwasher
F15	259-2	1	#8 solder lug
F16	252-7	3	Control nut
F17	252-73	1	Push-on nut
F18	253-10	1	Control flat washer
F19	254-5	1	Control lockwasher
F20	255-1	2	1/8" spacer

KEY	HEATH	QTY.	DESCRIPTION	CIRCUIT
No.	Part No.			Comp. No.

## METAL PARTS

G1	90-588-2	1	Cabinet shell
G2	200-1289-1	1	Chassis
G3	203-1455-2	1	Front panel
G4	204-1882	1	Bracket
G5	210-58	1	Bezel

## MISCELLANEOUS

H1	75-24	1	Small strain relief
H2	75-71	1	Large strain relief
H3	75-88	1	Transistor cover
H4	75-44	1	Mica insulator (packed between two pieces of cardboard).
	85-1977-1	1	Circuit board
	89-23	1	Line cord
H5	259-20	9	Connector pin (1 extra)
H6	261-29	4	Foot.
	344-2	2-1/2'	Black wire
	344-3	7-1/2'	Red wire
	344-59	1'	White wire
H7	352-13	1	Silicone grease
H8	413-10	1	Red lens
H9	422-1	1	Fuse block
H10	423-2	1	Fuseholder
H11	431-42	2	Terminal strip
H12	434-117	1	Transistor socket
H13	462-309	1	Knob
H14	490-5	1	Nut starter

Solder



## PRINTED MATERIAL

J1	390-1255	1	Fuse label
J2	391-34	1	Blue and white label
	597-260	1	Parts Order Form
		1	Assembly Manual (See Page 1 for part number.)

## ASSEMBLY NOTES


### TOOLS

You will need these tools to assemble your kit.

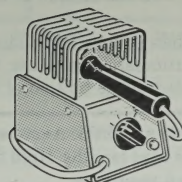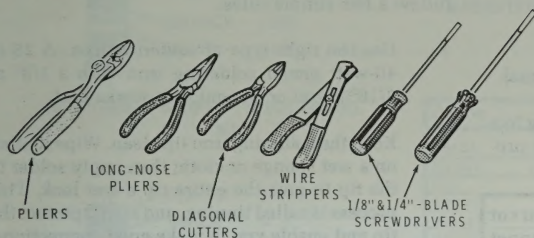


HEATHKIT  
SOLDERING  
IRON

OR

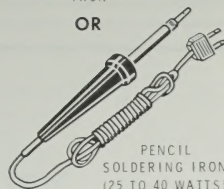

PENCIL  
SOLDERING IRON  
(25 TO 40 WATTS)

### OTHER HELPFUL TOOLS

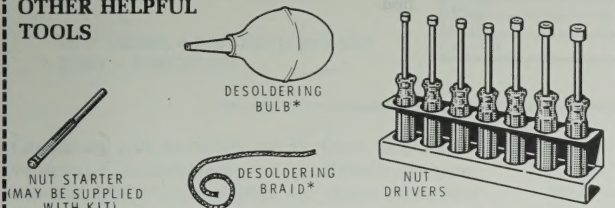

\*TO REMOVE SOLDER FROM CIRCUIT CONNECTIONS.

### ASSEMBLY

- Follow the instructions carefully and read the entire step before you perform the operation.
- The illustrations in the Manual are called Pictorials and Details. Pictorials show the overall operation for a group of assembly steps; Details generally illustrate a single step. When you are directed to refer to a certain Pictorial "for the following steps," continue using that Pictorial until you are referred to another Pictorial for another group of steps.
- Most kits use a separate "Illustration Booklet" that contains illustrations (Pictorials, Details, etc.) that are too large for the Assembly Manual. Keep the "Illustration Booklet" with the Assembly Manual. The illustrations in it are arranged in Pictorial number sequence.
- Position all parts as shown in the Pictorials.
- Solder a part or a group of parts only when you are instructed to do so.

6. Each circuit part in an electronic kit has its own component number (R2, C4, etc.). Use these numbers when you want to identify the same part in the various sections of the Manual. These numbers, which are especially useful if a part has to be replaced, appear:

- In the Parts List,
- At the beginning of each step where a component is installed,
- In some illustrations,
- In the Schematic,
- In the section at the rear of the Manual.

7. When you are instructed to cut something to a particular length, use the scales (rulers) provided at the bottom of the Manual pages.

**SAFETY WARNING:** Avoid eye injury when you cut off excess lead lengths. Hold the leads so they cannot fly toward your eyes.

## SOLDERING

Soldering is one of the most important operations you will perform while assembling your kit. A good solder connection will form an electrical connection between two parts, such as a component lead and a circuit board foil. A bad solder connection could prevent an otherwise well-assembled kit from operating properly.

It is easy to make a good solder connection if you follow a few simple rules:


1. Use the right type of soldering iron. A 25 to 40-watt pencil soldering iron with a 1/8" or 3/16" chisel or pyramid tip works best.
2. Keep the soldering iron tip clean. Wipe it often on a wet sponge or cloth; then apply solder to the tip to give the entire tip a wet look. This process is called tinning, and it will protect the tip and enable you to make good connections. When solder tends to "ball" or does not stick to the tip, the tip needs to be cleaned and retinned.




## PARTS

**Resistors** will be called out by their resistance value in  $\Omega$  (ohms),  $k\Omega$  (kilohms), or  $M\Omega$  (megohms). Certain types of resistors will have the value printed on the body, while others will be identified by a color code. The colors of the bands and the value will be given in the steps, therefore the following color code is given for information only.


### EXAMPLES:

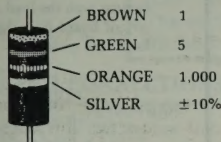

$15 \times 1,000 = 15,000 \Omega$  (15,000 OHMS),  
or "15  $k\Omega$ "

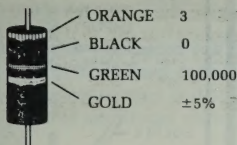

$30 \times 100,000 = 3,000,000 \Omega$  (or 3  $M\Omega$ )  
3  $M\Omega = 3$  MEGOHMS

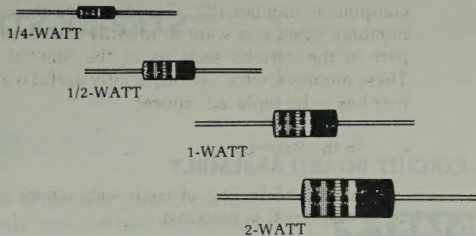

### RESISTOR COLOR CODE

**TOLERANCE**  
Gold 5%  
Silver 10%  
No Band 20%

COLOR	1st DIGIT	2nd DIGIT	MULTIPLY BY
BLACK	0	0	1
BROWN	1	1	10
RED	2	2	100
ORANGE	3	3	1,000
YELLOW	4	4	10,000
GREEN	5	5	100,000
BLUE	6	6	1,000,000
VIOLET	7	7	10,000,000
GRAY	8	8	100,000,000
WHITE	9	9	1,000,000,000
GOLD			.1
SILVER			.01

**Capacitors** will be called out by their capacitance value in  $\mu F$  (microfarads) or pF (picofarads) and type: ceramic, Mylar\*, electrolytic, etc. Some capacitors may have their value printed in the following manner:

### EXAMPLES:

151K =  $15 \times 10 = 150$  pF

759 =  $75 \times 0.1 = 7.5$  pF

**NOTE:** The letter "R" may be used at times to signify a decimal point; as in: 2R2 = 2.2 (pF or  $\mu F$ ).

First digit of

 
capacitor's value: 1

Second digit of

capacitor's value: 5

Multiplier: Multiply the first & second digits by the proper value from the Multiplier Chart.

To find the tolerance of the capacitor, look up this letter in the Tolerance columns.



MULTIPLIER		TOLERANCE OF CAPACITOR		
FOR THE NUMBER:	MULTIPLY BY:	10pF OR LESS	LETTER	OVER 10pF
0	1	$\pm 0.1$ pF	B	
1	10	$\pm 0.25$ pF	C	
2	100	$\pm 0.5$ pF	D	
3	1000	$\pm 1.0$ pF	F	$\pm 1\%$
4	10,000	$\pm 2.0$ pF	G	$\pm 2\%$
5	100,000		H	$\pm 3\%$
			J	$\pm 5\%$
8	0.01		K	$\pm 10\%$
9	0.1		M	$\pm 20\%$

# STEP-BY-STEP ASSEMBLY


## CIRCUIT BOARD ASSEMBLY

### START

- (✓) Position the circuit board as shown with the printed side (not the foil side) up. Then complete the steps in the following Pictorials.



NOTE: In the following steps you will be given detailed instructions on how to install and solder the first part on a circuit board. Read and perform each step carefully. Then use the same procedure whenever you install parts on a circuit board.

- (✓) R2: Hold a 22  $\Omega$  (red-red-black) resistor by the body as shown and bend the leads straight down.

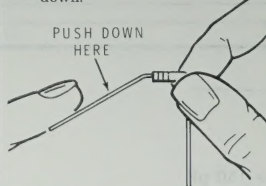

- (✓) Push the leads through the holes at the proper location on the circuit board. The end with color bands may be positioned either way.

 
- (✓) Press the resistor against the circuit board. Then bend the leads outward slightly to hold the resistor in place.

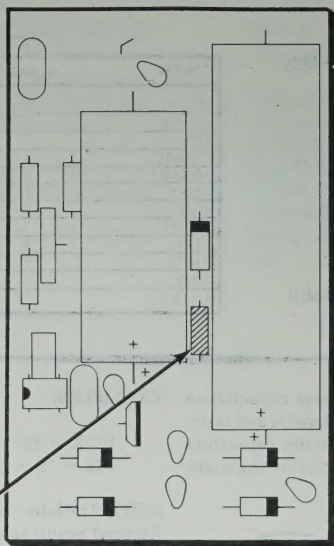


### CONTINUE

- ( ) Solder the resistor leads to the circuit board as follows:


1. Place the soldering iron tip against both the lead and the circuit board foil. Heat both for 2 or 3 seconds.

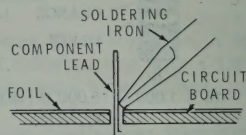

2. Then apply solder to the other side of the connection. IMPORTANT: Let the heated lead and the circuit board foil melt the solder.

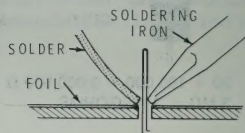

3. As the solder begins to melt, allow it to flow around the connection. Then remove the solder and the iron and let the connection cool.

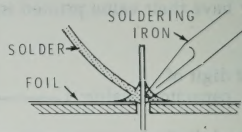


- ( ) Hold the lead with one hand while you cut off the excess lead length close to the connection. This will keep you from being hit in the eye by flying lead.

- ( ) Check the connection. Compare it to the illustrations on the next page. After you have checked the solder connections, proceed with the assembly on Page 9. Use the same soldering procedure for each connection.


PICTORIAL 1

## A GOOD SOLDER CONNECTION

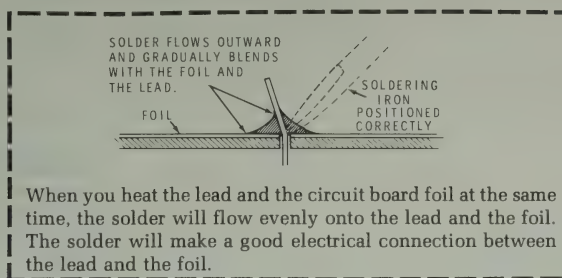


## POOR SOLDER CONNECTIONS

SOLDER DOES NOT FLOW ONTO LEAD. A DARK ROSIN BEAD SURROUNDS AND INSULATES THE LEAD FROM THE CONNECTION.

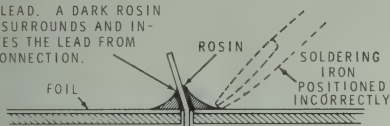

When the lead is not heated sufficiently, the solder will not flow onto the lead as shown above. To correct, reheat the connection and, if necessary, apply a small amount of additional solder to obtain a good connection.

SOLDER APPEARS TO FLOW INWARD AND SET ON TOP OF THE FOIL.

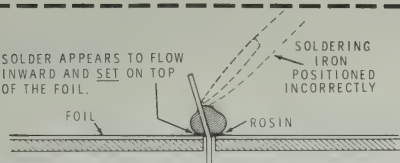

When the foil is not heated sufficiently the solder will blob on the circuit board as shown above. To correct, reheat the connection and, if necessary, apply a small amount of additional solder to obtain a good connection.

## SOLDER BRIDGES


A solder bridge between two adjacent foils is shown in photograph A below. Photograph B shows how the connection should appear. A solder bridge may occur if you accidentally touch an adjacent previously soldered connection, if you use too much solder, or if you "drag" the soldering iron across other foils as you remove it from the connection. A good rule to follow is: always take a good look at the foil area around each lead before you solder it. Then, when you solder the connection, make sure the solder remains in this area and does not bridge to another foil. This is especially important when the foils are small and close together. NOTE: It is alright for solder to bridge two connections on the same foil.



**A**

Use only enough solder to make a good connection, and lift the soldering iron straight up from the circuit board. If a solder bridge should develop, turn the circuit board foil-side-down and heat the solder between connections. The excess solder will run onto the tip of the soldering iron, and this will remove the solder bridge. NOTE: The foil side of each circuit board has a coating on it called "solder resist." This is a protective insulation to help prevent solder bridges.



**B**

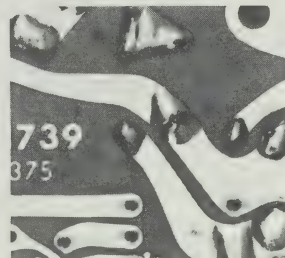




**START**

- (✓) R3: 6800  $\Omega$  (blue-gray-red).
- (✓) R6: 1000  $\Omega$  (brown-black-red).
- (✓) R5: 3900  $\Omega$  (orange-white-red).
- ( ) Solder the leads to the foil and cut off the excess lead lengths.
- ( / ) IC1: UA78MCT4C integrated circuit (#442-626). Position the IC so the tab is on the side of the IC as shown on the circuit board outline. Then insert the IC leads into their corresponding holes, press the IC down tight against the circuit board, and solder each lead to the foil.

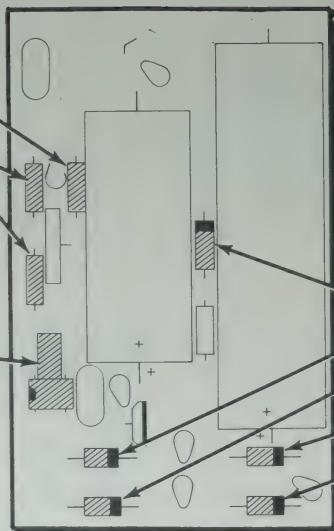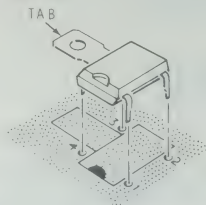**CONTINUE**


**IMPORTANT: THE BANDED END OF DIODES CAN BE MARKED IN A NUMBER OF WAYS.**

 

BANDED END

When you install a diode, always match the band on the diode with the band mark on the circuit board. A DIODE WILL NOT WORK IF INSTALLED BACKWARDS.

BANDED END

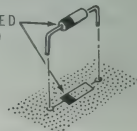


- (✓) D5: 1N2071 diode (#57-27).
- (✓) D4: S-5A05 diode (#57-71).
- (✓) D3: S-5A05 diode (#57-71).
- (✓) D2: S-5A05 diode (#57-71).
- (✓) D1: S-5A05 diode (#57-71).
- (✓) Solder the leads to the foil and cut off the excess lead lengths.

PICTORIAL 2

## CONTINUE

NOTE: In the following steps, install connector pins in the holes as shown. Push the connectors into the holes until the stop ridge is down firmly against the circuit board. Then solder the connectors to the foil.

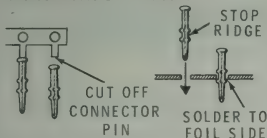

(✓) Connector pin at "+DC REGULATED."

(✓) Connector pin at GND.

(✓) Connector pin at E.


(✓) Connector pin at A.

(✓) Connector pin at B.

(✓) Connector pin at RED.

(✓) Connector pin at RED.

(✓) Connector pin at C.

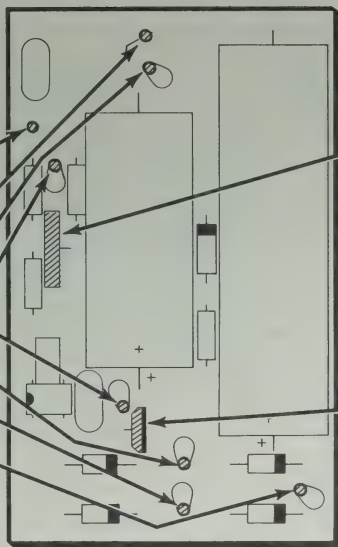


## START

(✓) R4: 500  $\Omega$  control. Solder the lugs to the foil.



(✓) Q1: MPSU05 transistor (#417-224). First identify the C, B, and E leads by the C, B, and E stamped on top of the transistor. Then insert the leads into their correct holes, which are identified by C, B, and E. Solder the leads to the foil and cut off the excess lead lengths.

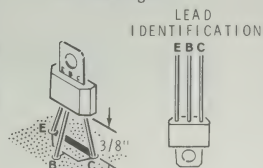

PICTORIAL 3




$$V = I \cdot R$$

**START**

(✓) C4: .1  $\mu$ F Mylar.

NOTE: When you install electrolytic capacitors, always match the positive (+) mark on the capacitor with the positive (+) mark on the circuit board.

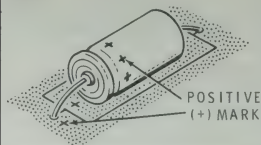


(✓) C2: 500  $\mu$ F electrolytic.

(✓) C1: 3500  $\mu$ F electrolytic.

(✓) C3: .1  $\mu$ F Mylar.

(✓) Solder the leads to the foil and cut off the excess lead lengths.

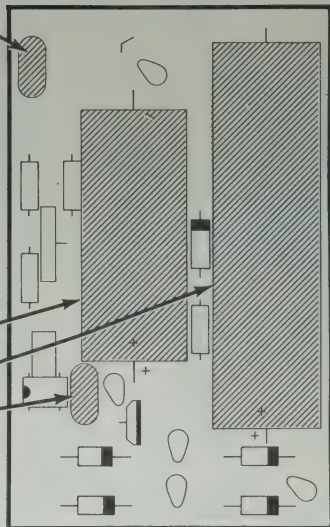**CONTINUE****CIRCUIT BOARD CHECKOUT**

Carefully inspect the circuit board for the following conditions.

- (✓) Unsoldered connections.
- (✓) Poor solder connections.
- (✓) Solder bridges between foil patterns.
- (✓) Protruding leads which could touch together.
- (✓) Integrated circuit for the proper type and installation.
- (✓) Electrolytic capacitors for the correct position of the positive (+) end.
- (✓) Transistor for proper installation.
- (✓) Diodes for the correct position of the banded end.

The circuit board wire connections will be made later. Temporarily set the circuit board aside.

**FINISH**

PICTORIAL 4



## CHASSIS ASSEMBLY



**NOTE:** When a step calls for hardware, only the screw size will be given. For instance, if a step calls for "8-32  $\times$  3/4" hardware," it means you should use an 8-32  $\times$  3/4" screw, one or more #8 lockwashers, and an 8-32 nut at each mounting hole. The Detail referred to in the step will show the proper number of lockwashers to use.

Refer to Pictorial 5 (Illustration Booklet, Page 2) for the following steps.

- ( / ) Position the chassis as shown in the Pictorial.
- ( / ) Refer to the inset drawing on the Pictorial and form the #8 solder lug as shown.

**NOTE:** When you mount the following parts onto the chassis, be sure to position them as shown in the Pictorial.


- ( / ) Refer to Detail 5A and mount the prepared #8 solder lug at hole A with 8-32  $\times$  3/4" hardware. Then install two #8 flat washers and an 8-32 thumbnut onto the screw.

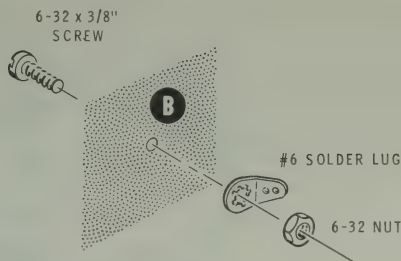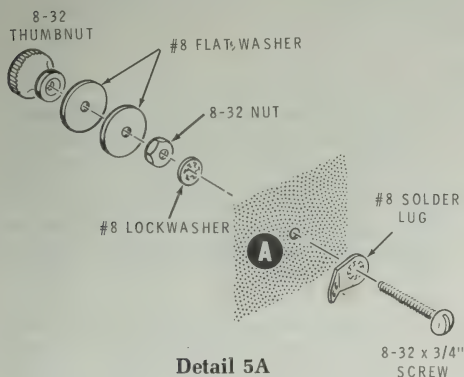


**Detail 5B**

**NOTE:** Use the plastic nut starter to hold and start 6-32 nuts on screws.


- (✓) Refer to Detail 5B and mount a #6 solder lug at hole B with 6-32  $\times$  3/8" hardware.
- (✓) Refer to Detail 5C and mount the fuse block at F1 with 6-32  $\times$  3/8" hardware. Be sure to use a #6 external tooth lockwasher between the fuse block and the chassis.

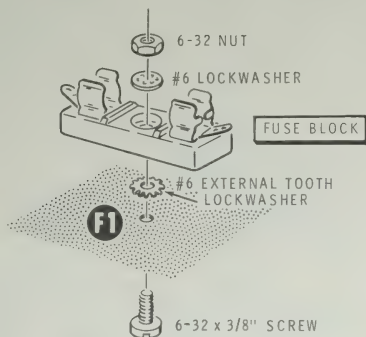

**Detail 5C**

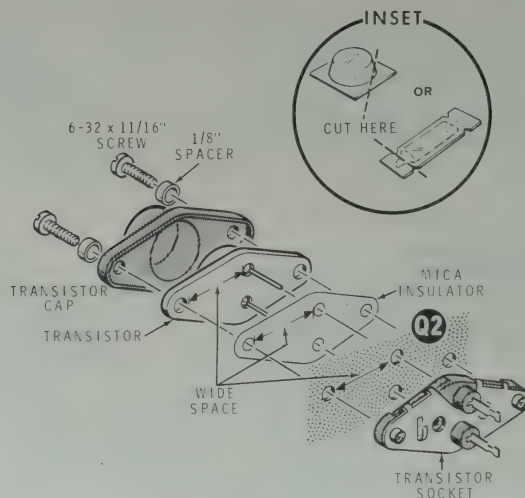

Detail 5E

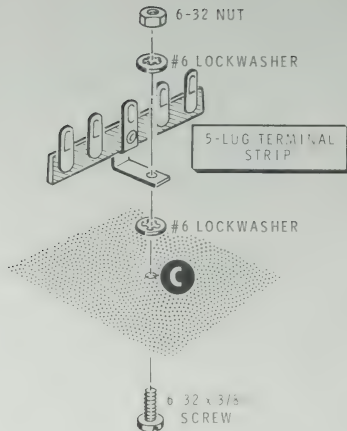


Detail 5D

- (✓) Refer to Detail 5D and mount a 5-lug terminal strip at C with 6-32  $\times$  3/8" hardware.


NOTE: When you mount the following transistor, be sure the indicated wide space on the transistor, mica insulator, and transistor socket lines up with the wide space on the chassis.

- (✓) Q2: Refer to Detail 5E and the inset drawing to install a transistor socket, mica insulator, 2N3055 transistor (#417-215), 1/8" spacers, and transistor cap at Q2. First, open the silicone grease pod as shown in the inset drawing and spread a thin layer of silicone grease on both sides of the mica insulator. Note the wide space, place the insulator on the transistor, and insert the transistor leads into the socket. Mount the cap with 6-32  $\times$  11/16" screws and 1/8" spacers.

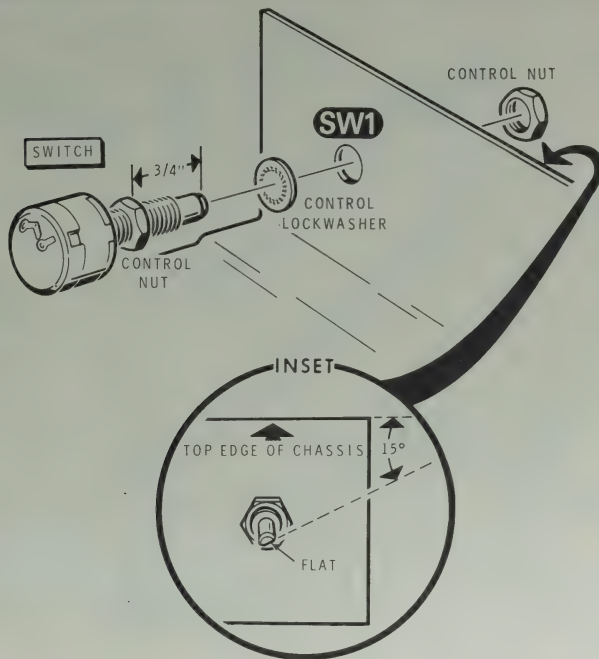


Detail 5F


- ( ) SW1: Refer to Detail 5F and position a control nut and a control lockwasher 3/4" away from the shaft end of the switch. Then loosely mount the switch to the chassis at SW1 with a control nut.
- ( ) Turn the switch shaft to the counterclockwise position and position the switch so the flat on the shaft will make a 15° angle to the top edge of the chassis as shown in the inset drawing in Detail 5F. Then tighten the control nut.
- ( ) Locate the front panel and mount a red lens at D with a push-on nut as shown in Detail 5G.
- ( ) Turn a 6-32 nut against the front panel on stud E.

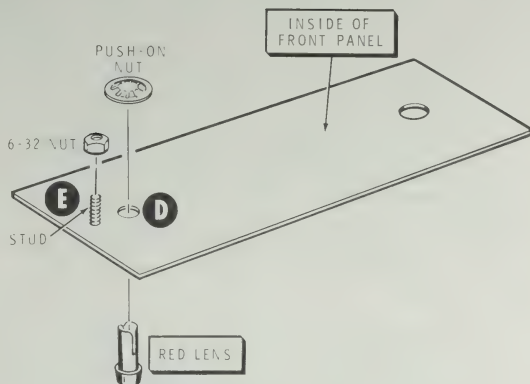

Detail 5G

 




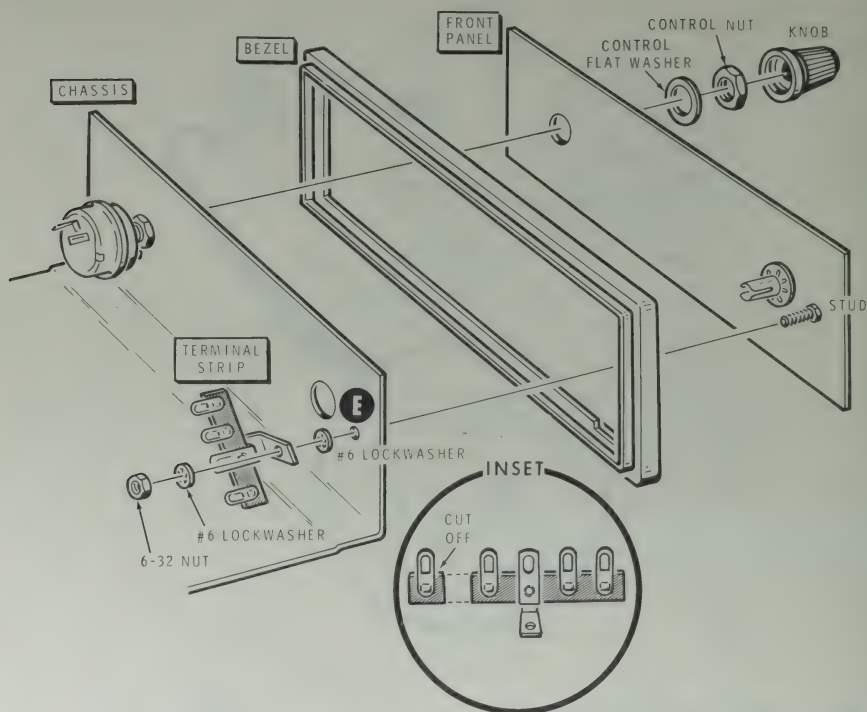


Detail 5H

- ( / ) Mount the front panel and bezel onto the chassis with a control flat washer and a control nut. Refer to Detail 5H and position the bezel as shown.
- ( V ) Line up the flat on the shaft with the flat on the knob. Then press the knob onto the switch shaft.
- ( ' ) Refer to Detail 5H and cut the indicated lug from a 5-lug terminal strip as shown in the inset drawing. Mount the terminal strip onto front panel stud E with two #6 lockwashers and a 6-32 nut. Position the terminal strip so there will be  $3/8"$  clearance above lug 1 as shown in Detail 5J.

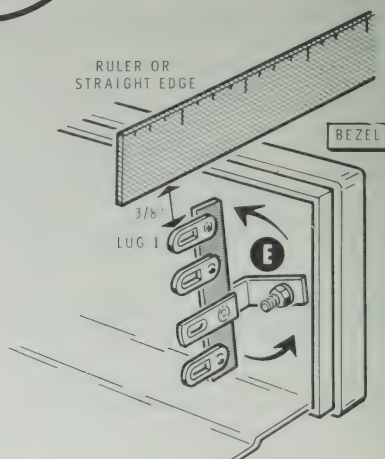

Detail 5J

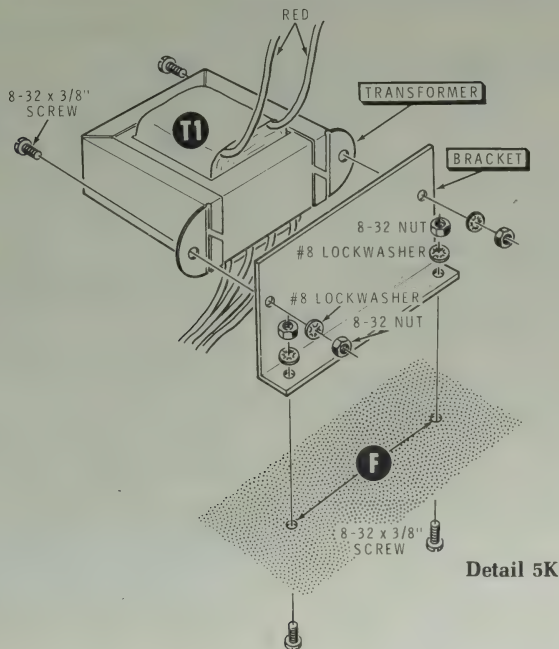


Detail 5K

- (✓) T1: Refer to Detail 5K and mount the power transformer to the bracket with 8-32 x 3/8" hardware. Be sure to position the transformer with the red leads as shown.
- (✓) Again refer to Detail 5K and mount the bracket and transformer to the chassis at F with 8-32 x 3/8" hardware. Be sure to position the four leads nearest the chassis as shown in the Pictorial.

- (✓) Mount the circuit board to the chassis at G with 6-32 x 3/8" hardware and 6-32 spacers as shown in Detail 5L (Illustration Booklet, Page 2).
- (✓) Refer to Detail 5M and mount the fuseholder onto the chassis at F2. Use the hardware supplied with the fuseholder. Position lug 1 as shown.

- (✓) F2: Remove the fuseholder cap. (Push in and turn it counterclockwise.) Then insert the 3-ampere fuse into the fuseholder and replace the cap.

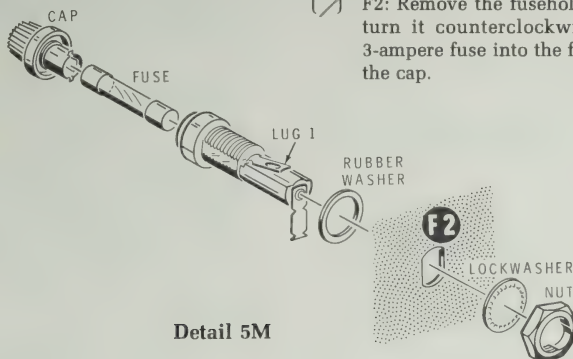

Detail 5M

## WIRING

Refer to Pictorial 6 (Illustration Booklet, Page 3) for the following steps.

## NOTES:

1. In the following steps, (NS) means not to solder because you will add other wires later. "S-" with a number, such as (S-3), means to solder the connection. The number following the "S" tells how many wires are at the connection.
2. Refer to the inset drawing on the Pictorial when you are directed to "make a mechanically secure connection."
- (✓) Connect the black-red transformer lead to terminal strip C lug 1 (NS). Make a mechanically secure connection.
- (✓) Connect the black-yellow transformer lead to terminal strip C lug 2 (NS). Make a mechanically secure connection.

NOTE: Terminal strip C lug 3 will not be used.

- (✓) Connect the black-green transformer lead to terminal strip C lug 4 (NS). Make a mechanically secure connection.
- (✓) Connect the black transformer lead to terminal strip C lug 5 (NS). Make a mechanically secure connection.
- (✓) Connect either red transformer lead to either RED connector pin on the circuit board (S-1).
- (✓) Connect the other red transformer lead to the remaining RED connector pin on the circuit board (S-1).
- (✓) Cut a 9" white wire and remove 3/8" of insulation from each end.
- (✓) Connect the 9" white wire from fuseholder F2 lug 1 (NS) to circuit board connector pin A (S-1).

NOTE: When you wire this kit, you will be instructed to prepare the wires ahead of time. To prepare a wire, cut it to the indicated length and remove 3/8" of insulation from each end. Twist together the small strands of wire at the end of each lead; then melt a small amount of solder on each of the exposed ends. The wires are listed in the order in which you will use them.


( ) Prepare the following wires:

3-1/2" red	9" red
8-1/2" red	Two 8" red
5" red	7-1/2" red
5" black	9" red

Connect the prepared wires in the following steps and position them as shown in the Pictorial.

- (✓) 3-1/2" red wire from transistor socket Q2 lug 2 (S-1) to circuit board connector pin E (S-1). Do not solder the transistor lead to the lug.
- (✓) 8-1/2" red wire from transistor socket Q2 lug 3 (S-1) to circuit board connector pin C (S-1).
- (✓) 5" red wire from transistor socket Q2 lug 1 (S-1) to circuit board connector pin B (S-1). Do not solder the transistor lead to the lug.
- (✓) Connect the 5" black wire from solder lug A (NS) to the GND connector pin on the circuit board (S-1).
- (✓) 9" red wire from fuseholder F2 lug 2 (S-1) to the +DC REGULATED connector pin on the circuit board (S-1).
- (✓) 8" red wire from fuse block F1 lug 1 (S-1) to switch SW1 lug 1 (S-1). Make mechanically secure connections.
- (✓) 8" red wire from switch SW1 lug 2 (NS) to terminal strip C lug 1 (NS). Make mechanically secure connections.
- (✓) 7-1/2" red wire from switch SW1 lug 2 (S-2) to terminal strip E lug 1 (NS). Make mechanically secure connections.
- (✓) 9" red wire from terminal strip C lug 4 (NS) to terminal strip E lug 4 (NS). Make mechanically secure connections.
- (✓) PL1: Insert the neon lamp into the red lens at D. Carefully remove all the insulation from a 1" length of red wire. Then slide the insulation onto one of the lamp leads. Connect this lamp lead to terminal strip E lug 1 (S-2).
- (✓) Connect the other lamp lead to terminal strip E lug 2 (NS).
- (✓) R1: Connect a 22 kΩ (red-red-orange) resistor between terminal strip D lug 2 (S-2) and 4 (S-2).



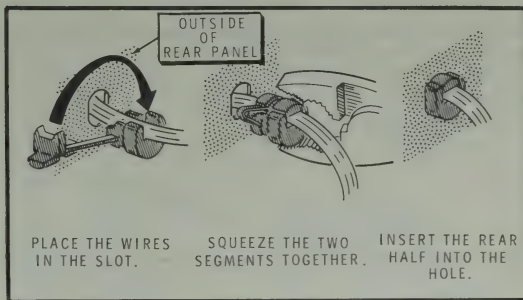


Detail 6A

- (✓) Prepare a 23" black and a 26" red wire.
- (✓) Connect the 23" black wire to solder lug A (S-2). Route the other end of the wire through hole H.
- (✓) Connect the 26" red wire to fuseholder F2 lug 1 (S-2). Route the other end of the wire through hole H.
- X ( ) Refer to Detail 6A and install the small strain relief on the two wires coming from hole H.

Refer to Pictorial 7 (Illustration Booklet, Page 3) for the following steps.


- (✓) Refer to Detail 7A and split the outer insulation of the line cord for 3" as follows, so you do not cut into the protective insulation for the AC leads.

1. Use a knife blade to score a 3" line BETWEEN the two grooves.
2. Turn the line cord over and repeat step 1.
3. Grasp the lead ends by the insulation and pull the leads apart. The line cord will separate on the scored lines.

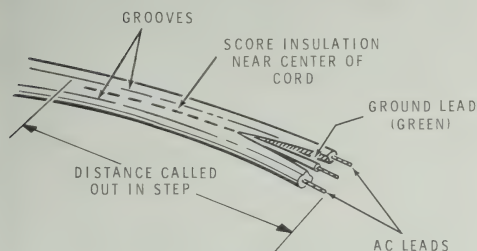


Detail 7A

- ( ) Refer to Detail 7B and prepare the free end of the line cord as shown. Refer to the inset drawing on the Pictorial for identification of the ribbed line cord lead.
- ( ) Insert the prepared end of the line cord through hole J and connect the smooth lead to fuse block F1 lug 2 (S-1). Make a mechanically secure connection.
- ( ) Connect the ribbed lead to terminal strip C lug 5 (NS). Make a mechanically secure connection.
- ( ) Connect the green lead to solder lug B (S-1). Make a mechanically secure connection.
- ( ) Install the large strain relief on the line cord at hole J.

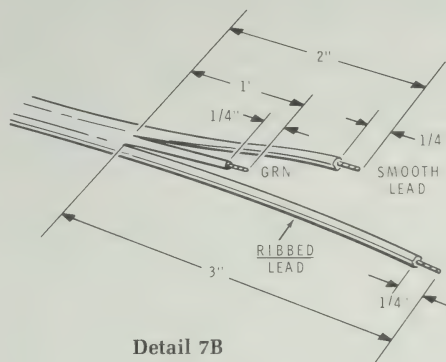

Detail 7B

 


NOTE: Two different sets of wiring instructions are given in the following steps. One set of instructions is for 120 VAC line voltage (most often used in the United States), and the other is for 240 VAC line voltage. Use only the instructions that agree with the line voltage in your area.

### For 120 VAC Only


Refer to Detail 7C for the following steps.


- (✓) Prepare two 1-1/4" red wires.
- (✓) Connect a 1-1/4" wire between terminal strip C lugs 1 (S-3) and 2 (S-2). Make mechanically secure connections.
- (✓) Connect the other 1-1/4" wire between terminal strip C lugs 4 (S-3) and 5 (S-3). Make mechanically secure connections.
- (✓) F1: Insert the 3/4-ampere fuse into fuse block F1.
- ( ) Write "3/4-ampere, slow-blow" in the blanks on the fuse label.
- ( ) Carefully peel the backing paper from the fuse label. Then press the label onto the chassis as shown. Do not cover any holes in the chassis.

This completes the 120 VAC wiring of your Power Supply. Proceed to the "Tests and Adjustments" section of this Manual.

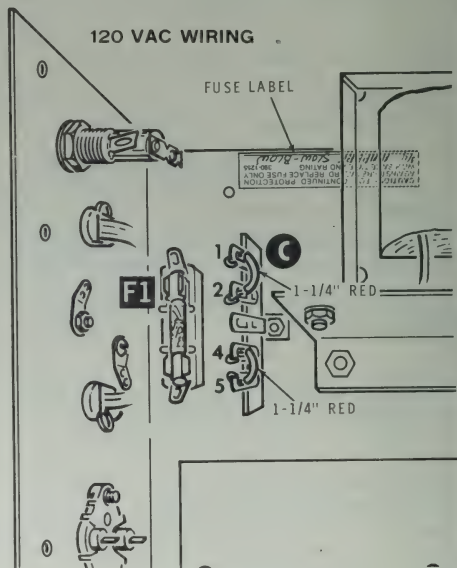

Detail 7C

 

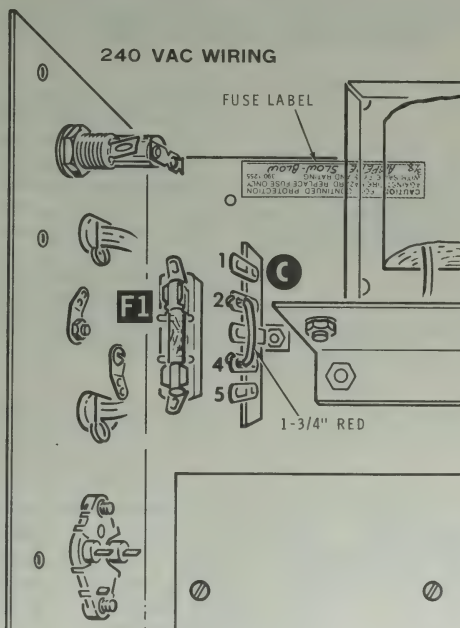

Detail 7D

### For 240 VAC Only

Refer to Detail 7D for the following steps.

- ( ) Prepare a 1-3/4" red wire. Then connect the wire between terminal strip C lugs 2 (S-2) and 4 (S-3). Make mechanically secure connections.
- ( ) Solder the wires connected to terminal strip C lugs 1 (S-2) and 5 (S-2).
- ( ) F1: Insert a 3/8-ampere fuse (not supplied) into fuse block F1.
- ( ) Write "3/8-ampere, slow-blow" in the blanks on the fuse label.
- ( ) Carefully peel the backing paper from the fuse label. Then press the label onto the chassis as shown. Do not cover any holes in the chassis.

NOTE: The plug on the line cord in this kit is for standard 120 VAC outlets. For 240 VAC operation in the U.S.A., cut off the plug and replace it with a permanent plug that matches your 240 VAC receptacle. Be sure your power connection conforms with section 210-21 (b) of the National Electric Code, which reads in part:

"Receptacles connected to circuits having different voltages, frequencies, or types of current (AC or DC) on the same premises shall be of such design that attachment plugs used on such circuits are not interchangeable."

When you install a new plug, make sure it is connected according to your local electrical code. Keep in mind that the green line cord wire is connected to the chassis of the Power Supply.

This completes the 240 VAC wiring of your Power Supply. Proceed to the "Tests and Adjustments" section of this Manual.

## TESTS AND ADJUSTMENTS

### PRIMARY WIRING TESTS

A wiring error in the primary wiring circuit (line cord, Power switch, etc.) of your kit could cause you to receive a severe electrical shock. These "Primary Wiring Tests" will help you eliminate any such wiring errors that may exist.

(✓) Be sure the line cord is not plugged in.

(✓) Turn the POWER switch to OFF.

If you do not have an ohmmeter, carefully check the line cord, fuse block, Power switch, and transformer wiring against that shown in Pictorials 6 and 7 (Illustration Booklet, Page 3), and Detail 7C on Page 20, or 7D on Page 21. Make sure there are no fine strands of wire or solder globs touching adjacent terminals or the chassis. Then proceed to "Voltage Adjustment."

If you have an ohmmeter, perform the following resistance measurements. NOTE: You will be instructed to connect one of the ohmmeter leads to ground. This can be the chassis or the ground post on the rear panel.

(✓) Place the ohmmeter in the RX10 position.

METER CONNECTIONS		METER READING	POSSIBLE CAUSE OF TROUBLE
RED LEAD	BLACK LEAD		
1. Either flat prong of the line cord plug.	Ground	INFINITE with the POWER switch ON or OFF.	A. Switch SW1 wiring. B. Terminal strip C wiring. C. T1.
2. Other flat prong of the line cord plug.	Ground	INFINITE with the POWER switch ON or OFF.	A. Switch SW1 wiring. B. Terminal strip C wiring. C. T1.
3. Round prong of the line cord plug.	Ground	0 $\Omega$ with the POWER switch ON or OFF.	A. Green lead of the line cord not properly connected at solder lug B. See Pictorial 7.
4. Either flat prong.	Other flat prong.	1 M $\Omega$ or higher (POWER Switch OFF).	A. Terminal strip C wiring. B. T1.
5. Either flat prong.	Other flat prong.	Approximately 10 $\Omega$ 120 or 240 VAC wiring. (POWER switch ON.)	A. Terminal strip C wiring. B. T1.

This completes the "Primary Wiring Tests." If all tests were satisfactory, proceed to "Secondary Resistance Checks." If any of the tests were not correct, you must make the corrections necessary to obtain the correct readings before you continue.



In the following steps, if you do not obtain the proper results, refer to the "In Case of Difficulty" section and correct the problem before you proceed.

## SECONDARY RESISTANCE CHECK

If you have a VOM (or VTVM) available, make the following resistance check before you plug the line cord into an AC outlet.

- ( / ) Connect the black ohmmeter lead to the chassis and the red ohmmeter lead to fuseholder F2 lug 2. The meter indicator should rise slowly (charging of circuit components) and then stop at approximately  $1000\ \Omega$  on the  $R \times 100$  ohmmeter range.
- ( / ) Disconnect the meter from the Power Supply.

## VOLTAGE ADJUSTMENT

**WARNING:** When the line cord is connected to an AC outlet, AC voltage will be present at several places on the chassis. Be careful you do not contact this voltage or an electrical shock can result. Refer to Figure 1 (Illustration Booklet, Page 4).

In the following steps, if you do not obtain the desired results, turn the Power Supply off and refer to the "In Case of Difficulty" section.


- ( ) Turn the POWER switch to OFF, if not already done.
- ( ) Plug the line cord into a proper AC outlet.

**NOTE:** Do not let the Power Supply output wires touch anything when you perform the following steps.

- ( ) Set your VTVM or VOM to read +15 volts DC.
- ( ) Connect the common lead of the meter to the chassis.
- ( ) Touch the positive meter lead to fuseholder F2 lug 2.
- ( ) Turn the Power Supply on. The lamp should light.
- ( ) Turn the VOLTAGE ADJUST control on the circuit board until the meter indicates +13.8 volts DC.
- ( ) Turn the POWER switch to OFF and disconnect the line cord plug.
- ( ) Disconnect the meter from the Power Supply.

This completes the "Tests and Adjustments." Proceed to "Final Assembly."

## FINAL ASSEMBLY

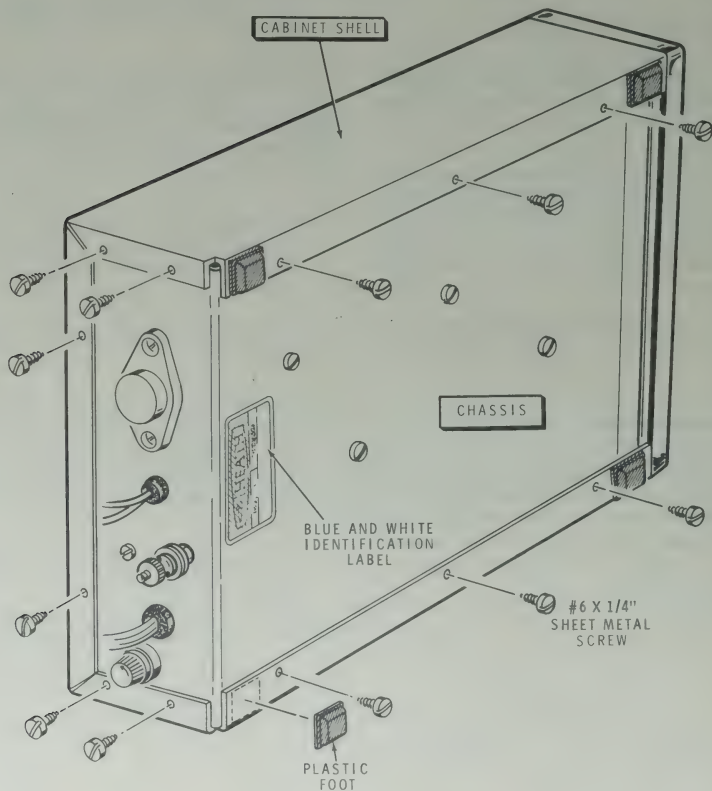

PICTORIAL 7

Refer to Pictorial 7 for the following steps.

- ( ) Locate the cabinet shell and slide it over the chassis from the rear. Mount the shell with twelve #6  $\times$  1/4" sheet metal screws. Do not move the VOLTAGE ADJUST control on the circuit board.
- ( ) Carefully peel the backing paper from each foot. Then press them into place as shown in the Pictorial.

- ( ) Carefully peel the backing paper from the blue and white label. Then press the label onto the chassis bottom as shown. Be sure to refer to the numbers on this label in any correspondence you have with the Heath Company about this kit.

This completes the "Final Assembly." Proceed to "Operation."

## OPERATION

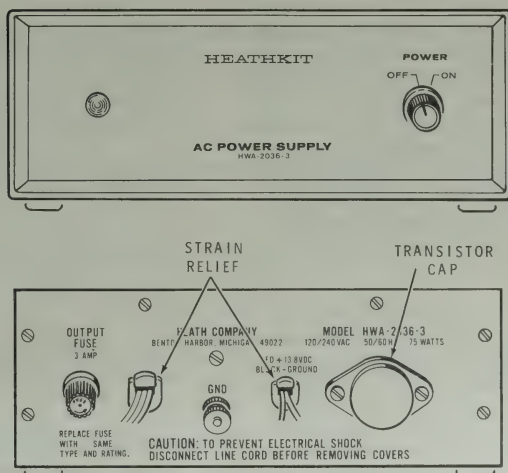


Figure 2

You can adjust the output voltage of this Power Supply between approximately 12.5 and 14.5 volts DC, as noted in the "Specifications" section. The recommended value for use with HW-202 and HW-2036 Transceivers is 13.8 volts DC. To operate this AC Power Supply, simply connect the line cord to the proper AC outlet and connect the red wire to the positive input and the black wire to the negative input of the unit you wish to power. Then turn the POWER switch to the ON position.

Refer to Figure 2.

The GND post on the rear panel serves as a circuit ground point and a safety ground for any short circuits in the power wiring. Connect the GND post to your station ground or a good earth ground.

Connectors and instructions for using this Power Supply with the HW-202 and HW-2036 Transceivers are included with the Transceiver kits.



## IN CASE OF DIFFICULTY

**WARNING:** When the line cord is connected to an AC outlet, AC voltage is present at several places on the chassis. Be careful you do not contact this voltage or an electrical shock can result.

1. Recheck the wiring. Trace each lead with a color pencil on the Pictorial as you check it. It is frequently helpful to have a friend check your work. Someone who is not familiar with the unit may notice something you have consistently overlooked.
2. About 90% of the kits that are returned for repair do not function properly due to poor connections and soldering. Therefore, you can eliminate many troubles by a careful inspection of the connections to make sure they are soldered as described in the "Soldering" section of the "Assembly Notes" on Page 6. Be sure all the wires are soldered at places where several wires are connected.
3. Be sure the transistors and the integrated circuit are in the proper locations (correct part number and type number). Be sure that each lead is in the correct hole and has a good solder connection to the foil.
4. Check capacitor values carefully. Be sure the proper part is wired into the circuit at each capacitor location. Check each electrolytic capacitor to be sure the lead near the positive (+) marking is at the correct position.
5. Check each resistor value carefully.
6. Be sure the correct diode is installed at each diode location, and the banded end is positioned correctly.
7. Check all component leads connected to the circuit board.
8. Make sure the bare wire ends do not touch the chassis or other lugs and make sure all wires are properly soldered.

In an extreme case where you are unable to resolve a difficulty, refer to the "Customer Service" information inside the rear cover of this Manual. Your Warranty is located inside the front cover.

## Troubleshooting Chart

PROBLEM	POSSIBLE CAUSE
Voltage drops significantly when transmitting.	<ol style="list-style-type: none"> <li>1. IC1.</li> <li>2. Transistor Q1 and Q2.</li> </ol>
Unable to obtain +13.8 VDC with Voltage Adjust control.	<ol style="list-style-type: none"> <li>1. IC1.</li> <li>2. Voltage Adjust control R4.</li> <li>3. Resistors R3 or R5.</li> </ol>
No output voltage.	<ol style="list-style-type: none"> <li>1. IC1.</li> <li>2. Transistor Q1 or Q2.</li> <li>3. Transformer T1.</li> <li>4. Capacitor C1 or C4.</li> </ol>
Input fuse F1 blows.	<ol style="list-style-type: none"> <li>1. Transformer T1.</li> <li>2. Capacitor C1 or C4.</li> <li>3. Diodes D1 through D4.</li> </ol>
Output fuse F2 blows.	<ol style="list-style-type: none"> <li>1. External load too large.</li> <li>2. Output wires touching.</li> </ol>
Pilot lamp not lit.	<ol style="list-style-type: none"> <li>1. Lamp PL1.</li> <li>2. Resistor R1.</li> </ol>

## SPECIFICATIONS

Output Voltage .....	13.8 VDC regulated. (Adjustable from approximately 12.5 to 14.5 VDC).
Output Current .....	2.7 amperes, 40% duty cycle at 13.8 VDC.
Regulation .....	Better than 1% from no load to full load (2.7 amperes).
Ripple .....	Less than 0.1%.
Transistor, Integrated Circuit, and Diode Complement .....	2N3055 pass transistor (1). MPSU05 driver transistor (1). UA78MCT4C IC voltage regulator (1). 1N2071 silicon diode (1). S-5A05 silicon diode (4).
Power Requirements .....	110 to 130 VAC or 220 to 260 VAC, 50/60 Hz, at 75 watts (full load).
Dimensions .....	3" high $\times$ 7-1/4" wide $\times$ 10" deep (including switch and feet). (7.6 $\times$ 18.4 $\times$ 25.4 cm.)
Net Weight .....	5 lbs (2.3 kg).

---

The Heath Company reserves the right to discontinue products and to change specifications at any time without incurring any obligation to incorporate new features in products previously sold.



## CIRCUIT DESCRIPTION

Refer to the Schematic Diagram (Illustration Booklet, Page 4) while you read this "Circuit Description." Refer to the "Circuit Board X-Ray View" for the physical location of the parts on the circuit board.

The 120 VAC or 240 VAC line voltage is applied through fuse F1 and Power switch SW1 to the primary winding of power transformer T1. From the secondary winding, the voltage is applied to silicon diodes D1, D2, D3, and D4. These diodes operate as a full-wave bridge rectifier circuit. The rectified voltage is then filtered by electrolytic capacitor C1 before it is applied to the regulator circuitry.

Transistors Q1 and Q2 form a Darlington circuit which provides exceptionally high gain for excellent regulation. The conduction of the Darlington circuit and the output voltage is controlled by the base bias provided by integrated circuit IC1. IC1, with its own zener reference diode, samples the output voltage, compares this to the internal reference voltage, and

automatically adjusts the base bias of Q1 as needed to maintain a fixed output level under varying load conditions. The output voltage is sampled at the output of Q2. This allows almost no change in load voltage from no-load to full-load conditions.

The regulated output voltage output level is adjusted by Voltage Adjust control R4 on the circuit board.


Capacitor C2 provides a nearly pure DC voltage for integrated circuit regulator IC1. Diode D5 allows C2 to charge from the power path but does not allow it to discharge back. In this way, only the small load of IC1 is placed on C2. R2 prevents excessive current from flowing through D1 when the Power Supply is turned on.

Fuse F2 protects pass transistor Q2 against an overload. Resistor R6 is a bleeder resistor, and capacitors C3 and C4 provide transient protection.

## CIRCUIT BOARD X-RAY VIEW





NOTE: To identify a part shown in this View, so you can order a replacement, proceed in either of the following ways:

- NOTE: To identify a part shown in this View, so you can order a replacement, proceed in either of the following ways:
1. A. Refer to the place where the part is installed in the Step-by-Step instructions and note the "description" of the part (for example: 22 k $\Omega$ , .1  $\mu$ F, or MPSU05).
  - B. Look up this description in the "Parts List."
  2. A. Note the identification number of the part (R-number, C-number, etc.).
  - B. Locate the same identification number (next to the part) on the Schematic. The "description" of the part will also appear near the part.
  - C. Look up this description in the "Parts List."

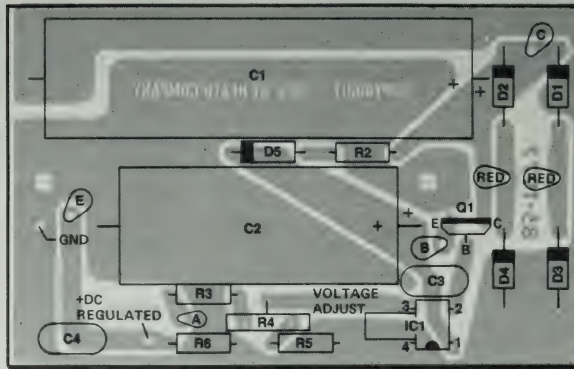

(Shown from component side)

# SEMICONDUCTOR IDENTIFICATION CHART

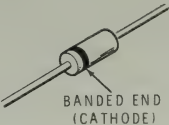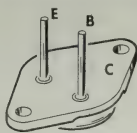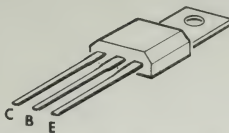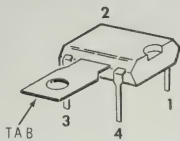HEATH PART NUMBER	MAY BE REPLACED WITH	CIRCUIT COMPONENT NUMBER	IDENTIFICATION
57-27	1N2071	D5	
57-71	S-5A05	D1, D2, D3, D4	
417-215	2N3055	Q2	
417-224	MPSU05	Q1	
442-626	UA78MGT4C	IC1	 <p> 1. INPUT  2. OUTPUT  3. CONTROL  4. COMMON </p>

Component		Value	
Resistors		Value	
R1	10K	R2	10K
R3	10K	R4	10K
R5	10K	R6	10K
R7	10K	R8	10K
R9	10K	R10	10K
R11	10K	R12	10K
R13	10K	R14	10K
R15	10K	R16	10K
R17	10K	R18	10K
R19	10K	R20	10K
R21	10K	R22	10K
R23	10K	R24	10K
R25	10K	R26	10K
R27	10K	R28	10K
R29	10K	R30	10K
R31	10K	R32	10K
R33	10K	R34	10K
R35	10K	R36	10K
R37	10K	R38	10K
R39	10K	R40	10K
R41	10K	R42	10K
R43	10K	R44	10K
R45	10K	R46	10K
R47	10K	R48	10K
R49	10K	R50	10K
R51	10K	R52	10K
R53	10K	R54	10K
R55	10K	R56	10K
R57	10K	R58	10K
R59	10K	R60	10K
R61	10K	R62	10K
R63	10K	R64	10K
R65	10K	R66	10K
R67	10K	R68	10K
R69	10K	R70	10K
R71	10K	R72	10K
R73	10K	R74	10K
R75	10K	R76	10K
R77	10K	R78	10K
R79	10K	R80	10K
R81	10K	R82	10K
R83	10K	R84	10K
R85	10K	R86	10K
R87	10K	R88	10K
R89	10K	R90	10K
R91	10K	R92	10K
R93	10K	R94	10K
R95	10K	R96	10K
R97	10K	R98	10K
R99	10K	R100	10K
R101	10K	R102	10K
R103	10K	R104	10K
R105	10K	R106	10K
R107	10K	R108	10K
R109	10K	R110	10K
R111	10K	R112	10K
R113	10K	R114	10K
R115	10K	R116	10K
R117	10K	R118	10K
R119	10K	R120	10K
R121	10K	R122	10K
R123	10K	R124	10K
R125	10K	R126	10K
R127	10K	R128	10K
R129	10K	R130	10K
R131	10K	R132	10K
R133	10K	R134	10K
R135	10K	R136	10K
R137	10K	R138	10K
R139	10K	R140	10K
R141	10K	R142	10K
R143	10K	R144	10K
R145	10K	R146	10K
R147	10K	R148	10K
R149	10K	R150	10K
R151	10K	R152	10K
R153	10K	R154	10K
R155	10K	R156	10K
R157	10K	R158	10K
R159	10K	R160	10K
R161	10K	R162	10K
R163	10K	R164	10K
R165	10K	R166	10K
R167	10K	R168	10K
R169	10K	R170	10K
R171	10K	R172	10K
R173	10K	R174	10K
R175	10K	R176	10K
R177	10K	R178	10K
R179	10K	R180	10K
R181	10K	R182	10K
R183	10K	R184	10K
R185	10K	R186	10K
R187	10K	R188	10K
R189	10K	R190	10K
R191	10K	R192	10K
R193	10K	R194	10K
R195	10K	R196	10K
R197	10K	R198	10K
R199	10K	R200	10K
R201	10K	R202	10K
R203	10K	R204	10K
R205	10K	R206	10K
R207	10K	R208	10K
R209	10K	R210	10K
R211	10K	R212	10K
R213	10K	R214	10K
R215	10K	R216	10K
R217	10K	R218	10K
R219	10K	R220	10K
R221	10K	R222	10K
R223	10K	R224	10K
R225	10K	R226	10K
R227	10K	R228	10K
R229	10K	R230	10K
R231	10K	R232	10K
R233	10K	R234	10K
R235	10K	R236	10K
R237	10K	R238	10K
R239	10K	R240	10K
R241	10K	R242	10K
R243	10K	R244	10K
R245	10K	R246	10K
R247	10K	R248	10K
R249	10K	R250	10K
R251	10K	R252	10K
R253	10K	R254	10K
R255	10K	R256	10K
R257	10K	R258	10K
R259	10K	R260	10K
R261	10K	R262	10K
R263	10K	R264	10K
R265	10K	R266	10K
R267	10K	R268	10K
R269	10K	R270	10K
R271	10K	R272	10K
R273	10K	R274	10K
R275	10K	R276	10K
R277	10K	R278	10K
R279	10K	R280	10K
R281	10K	R282	10K
R283	10K	R284	10K
R285	10K	R286	10K
R287	10K	R288	10K
R289	10K	R290	10K
R291	10K	R292	10K
R293	10K	R294	10K
R295	10K	R296	10K
R297	10K	R298	10K
R299	10K	R300	10K
R301	10K	R302	10K
R303	10K	R304	10K
R305	10K	R306	10K
R307	10K	R308	10K
R309	10K	R310	10K
R311	10K	R312	10K
R313	10K	R314	10K
R315	10K	R316	10K
R317	10K	R318	10K
R319	10K	R320	10K
R321	10K	R322	10K
R323	10K	R324	10K
R325	10K	R326	10K
R327	10K	R328	10K
R329	10K	R330	10K
R331	10K	R332	10K
R333	10K	R334	10K
R335	10K	R336	10K
R337	10K	R338	10K
R339	10K	R340	10K
R341	10K	R342	10K
R343	10K	R344	10K
R345	10K	R346	10K
R347	10K	R348	10K
R349	10K	R350	10K
R351	10K	R352	10K
R353	10K	R354	10K
R355	10K	R356	10K
R357	10K	R358	10K
R359	10K	R360	10K
R361	10K	R362	10K
R363	10K	R364	10K
R365	10K	R366	10K
R367	10K	R368	10K
R369	10K	R370	10K
R371	10K	R372	10K
R373	10K	R374	10K
R375	10K	R376	10K
R377	10K	R378	10K
R379	10K	R380	10K
R381	10K	R382	10K
R383	10K	R384	10K
R385	10K	R386	10K
R387	10K	R388	10K
R389	10K	R390	10K
R391	10K	R392	10K
R393	10K	R394	10K
R395	10K	R396	10K
R397	10K	R398	10K
R399	10K	R400	10K
R401	10K	R402	10K
R403	10K	R404	10K
R405	10K	R406	10K
R407	10K	R408	10K
R409	10K	R410	10K
R411	10K	R412	10K
R413	10K	R414	10K
R415	10K	R416	10K
R417	10K	R418	10K
R419	10K	R420	10K
R421	10K	R422	10K
R423	10K	R424	10K
R425	10K	R426	10K
R427	10K	R428	10K
R429	10K	R430	10K
R431	10K	R432	10K
R433	10K	R434	10K
R435	10K	R436	10K
R437	10K	R438	10K
R439	10K	R440	10K
R441	10K	R442	10K
R443	10K	R444	10K
R445	10K	R446	10K
R447	10K	R448	10K
R449	10K	R450	10K
R451	10K	R452	10K
R453	10K	R454	10K
R455	10K	R456	10K
R457	10K	R458	10K
R459	10K	R460	10K
R461	10K	R462	10K
R463	10K	R464	10K
R465	10K	R466	10K
R467	10K	R468	10K
R469	10K	R470	10K
R471	10K	R472	10K
R473	10K	R474	10K
R475	10K	R476	10K
R477	10K	R478	10K
R479	10K	R480	10K
R481	10K	R482	10K
R483	10K	R484	10K
R485	10K	R486	10K
R487	10K	R488	10K
R489	10K	R490	10K
R491	10K	R492	10K
R493	10K	R494	10K
R495	10K	R496	10K
R497	10K	R498	10K
R499	10K	R500	10K
R501	10K	R502	10K
R503	10K	R504	10K
R505	10K	R506	10K
R507	10K	R508	10K
R509	10K	R510	10K
R511	10K	R512	10K
R513	10K	R514	10K
R515	10K	R516	10K
R517	10K	R518	10K
R519	10K	R520	10K
R521	10K	R522	10K
R523	10K	R524	10K
R525	10K	R526	10K
R527	10K	R528	10K
R529	10K	R530	10K
R531	10K	R532	10K
R533	10K	R534	10K
R535	10K	R536	10K
R537	10K	R538	10K
R539	10K	R540	10K
R541	10K	R542	10K
R543	10K	R544	10K
R545	10K	R546	10K
R547	10K	R548	10K
R549	10K	R550	10K
R551	10K	R552	10K
R553	10K	R554	10K
R555	10K	R556	10K
R557	10K	R558	10K
R559	10K	R560	10K
R561	10K	R562	10K
R563	10K	R564	10K
R565	10K	R566	10K
R567	10K	R568	10K
R569	10K	R570	10K
R571	10K	R572	10K
R573	10K	R574	10K
R575	10K	R576	10K
R577	10K	R578	10K
R579	10K	R580	10K
R581	10K	R582	10K
R583	10K	R584	10K
R585	10K	R586	10K
R587	10K	R588	10K
R589	10K	R590	10K
R591	10K	R592	10K
R593	10K	R594	10K
R595	10K	R596	10K
R597	10K	R598	10K
R599	10K	R600	10K
R601	10K	R602	10K
R603	10K	R604	10K
R605	10K	R606	10K
R607	10K	R608	10K
R609	10K	R610	10K
R611	10K	R612	10K
R613	10K	R614	10K
R615	10K	R616	10K
R617	10K	R618	10K
R619	10K	R620	10K
R621	10K	R622	10K
R623	10K	R624	10K
R625	10K	R626	10K
R627	10K	R628	10K
R629	10K	R630	10K
R631	10K	R632	10K
R633	10K	R634	10K
R635	10K	R636	10K
R637	10K	R638	10K
R639	10K	R640	10K
R641	10K	R642	10K
R643	10K	R644	10K
R645	10K	R646	10K
R647	10K	R648	10K
R649	10K	R650	10K
R651	10K	R652	10K
R653	10K	R654	10K
R655	10K	R656	10K
R657	10K	R658	10K
R659	10K	R660	10K
R661	10K	R662	10K
R663	10K	R664	10K
R665	10K	R666	10K
R667	10K	R668	10K
R669	10K	R670	10K
R671	10K	R672	10K
R673	10K	R674	10K
R675	10K	R676	10K
R677	10K	R678	10K
R679	10K	R680	10K
R681	10K	R682	10K
R683			









**FOR PARTS REQUESTS ONLY**

- Be sure to follow instructions carefully.
- Use a separate letter for all correspondence.
- Please allow 10 - 14 days for mail delivery time.

**DO NOT WRITE IN THIS SPACE****INSTRUCTIONS**

- Please print all information requested.
- Be sure you list the correct **HEATH** part number exactly as it appears in the parts list.
- If you wish to prepay your order, mail this card and your payment in an envelope. Be sure to include 10% (25¢ minimum, \$3.50 maximum) for insurance, shipping and handling. Michigan residents add 4% tax.  
Total enclosed \$ \_\_\_\_\_
- If you prefer COD shipment, check the COD box and mail this card. COD ☐

NAME \_\_\_\_\_

ADDRESS \_\_\_\_\_

CITY \_\_\_\_\_

STATE \_\_\_\_\_ ZIP \_\_\_\_\_

The information requested in the next two lines is not required when purchasing nonwarranty replacement parts, but it can help us provide you with better products in the future.

Model # \_\_\_\_\_ Invoice # \_\_\_\_\_

Date Purchased \_\_\_\_\_ Location Purchased \_\_\_\_\_

LIST **HEATH**  
PART NUMBER

QTY.

PRICE  
EACHTOTAL  
PRICE

TOTAL FOR PARTS

HANDLING AND SHIPPING

MICHIGAN RESIDENTS ADD 4% TAX

TOTAL AMOUNT OF ORDER

SEND TO: **HEATH COMPANY**  
BENTON HARBOR  
MICHIGAN 49022  
**ATTN: PARTS REPLACEMENT**

Phone (Replacement parts only): 616 982-3571

THIS FORM IS FOR U.S. CUSTOMERS ONLY  
OVERSEAS CUSTOMERS SEE YOUR DISTRIBUTOR

**FOR PARTS REQUESTS ONLY**

- Be sure to follow instructions carefully.
- Use a separate letter for all correspondence.
- Please allow 10 - 14 days for mail delivery time.

**DO NOT WRITE IN THIS SPACE****INSTRUCTIONS**

- Please print all information requested.
- Be sure you list the correct **HEATH** part number exactly as it appears in the parts list.
- If you wish to prepay your order, mail this card and your payment in an envelope. Be sure to include 10% (25¢ minimum, \$3.50 maximum) for insurance, shipping and handling. Michigan residents add 4% tax.  
Total enclosed \$ \_\_\_\_\_
- If you prefer COD shipment, check the COD box and mail this card. COD ☐

NAME \_\_\_\_\_

ADDRESS \_\_\_\_\_

CITY \_\_\_\_\_

STATE \_\_\_\_\_ ZIP \_\_\_\_\_

The information requested in the next two lines is not required when purchasing nonwarranty replacement parts, but it can help us provide you with better products in the future.

Model # \_\_\_\_\_ Invoice # \_\_\_\_\_

Date Purchased \_\_\_\_\_ Location Purchased \_\_\_\_\_

LIST **HEATH**  
PART NUMBER

QTY.

PRICE  
EACHTOTAL  
PRICE

TOTAL FOR PARTS

HANDLING AND SHIPPING

MICHIGAN RESIDENTS ADD 4% TAX

TOTAL AMOUNT OF ORDER




SEND TO: **HEATH COMPANY**  
BENTON HARBOR  
MICHIGAN 49022  
**ATTN: PARTS REPLACEMENT**

Phone (Replacement parts only): 616 982-3571

THIS FORM IS FOR U.S. CUSTOMERS ONLY  
OVERSEAS CUSTOMERS SEE YOUR DISTRIBUTOR

CUT ALONG DOTTED LINE



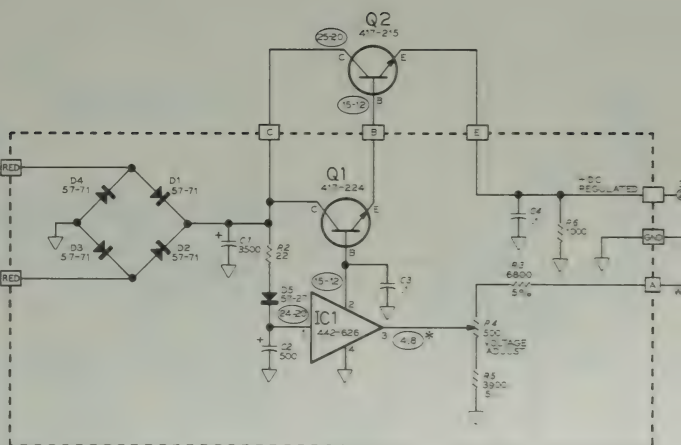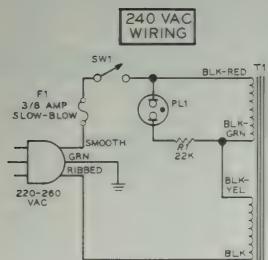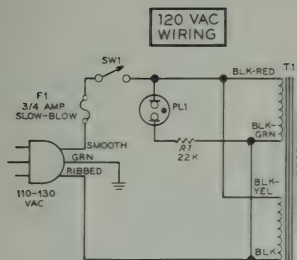

**SCHEMATIC OF THE  
HEATHKIT  
AC POWER SUPPLY  
MODEL HWA-2036-3**

**NOTES:**

1. RESISTOR VALUES ARE IN OHMS. ALL RESISTORS ARE 1/2 WATT.
2. CAPACITOR VALUES ARE IN  $\mu$ F.
3. THIS SYMBOL INDICATES A CONNECTION TO THE CIRCUIT BOARD.
4. THIS SYMBOL INDICATES DC VOLTAGES WITH 120 VAC SOURCE. VOLTAGES MAY VARY  $\pm 20\%$ . FIRST FIGURE IS TAKEN WITH NO LOAD. SECOND FIGURE IS TAKEN WITH 2.7A-LOAD.
5. \* THIS VOLTAGE VARIES WITH THE SETTING OF CONTROL R4.

IC1 FAIRCHILD 4428MG

**FOR PARTS REQUESTS ONLY**

- Be sure to follow instructions carefully.
- Use a separate letter for all correspondence.
- Please allow 10 - 14 days for mail delivery time.

**DO NOT WRITE IN THIS SPACE****INSTRUCTIONS**

- Please print all information requested.
- Be sure you list the correct **HEATH** part number exactly as it appears in the parts list.
- If you wish to prepay your order, mail this card and your payment in an envelope. Be sure to include 10% (25¢ minimum, \$3.50 maximum) for insurance, shipping and handling. Michigan residents add 4% tax.  
Total enclosed \$ \_\_\_\_\_
- If you prefer COD shipment, check the COD box and mail this card. COD ☐

NAME \_\_\_\_\_

ADDRESS \_\_\_\_\_

CITY \_\_\_\_\_

STATE \_\_\_\_\_ ZIP \_\_\_\_\_

The information requested in the next two lines is not required when purchasing nonwarranty replacement parts, but it can help us provide you with better products in the future.

Model # \_\_\_\_\_ Invoice # \_\_\_\_\_

Date \_\_\_\_\_ Location \_\_\_\_\_

Purchased \_\_\_\_\_ Purchased \_\_\_\_\_

LIST **HEATH**  
PART NUMBER

QTY.

PRICE  
EACHTOTAL  
PRICE

TOTAL FOR PARTS

HANDLING AND SHIPPING

MICHIGAN RESIDENTS ADD 4% TAX

TOTAL AMOUNT OF ORDER

SEND TO: **HEATH COMPANY**  
BENTON HARBOR  
MICHIGAN 49022  
ATTN: PARTS REPLACEMENT

Phone (Replacement parts only): 616 982-3571

THIS FORM IS FOR U.S. CUSTOMERS ONLY  
OVERSEAS CUSTOMERS SEE YOUR DISTRIBUTOR

**FOR PARTS REQUESTS ONLY**

- Be sure to follow instructions carefully.
- Use a separate letter for all correspondence.
- Please allow 10 - 14 days for mail delivery time.

**DO NOT WRITE IN THIS SPACE****INSTRUCTIONS**

- Please print all information requested.
- Be sure you list the correct **HEATH** part number exactly as it appears in the parts list.
- If you wish to prepay your order, mail this card and your payment in an envelope. Be sure to include 10% (25¢ minimum, \$3.50 maximum) for insurance, shipping and handling. Michigan residents add 4% tax.  
Total enclosed \$ \_\_\_\_\_
- If you prefer COD shipment, check the COD box and mail this card. COD ☐

NAME \_\_\_\_\_

ADDRESS \_\_\_\_\_

CITY \_\_\_\_\_

STATE \_\_\_\_\_ ZIP \_\_\_\_\_

The information requested in the next two lines is not required when purchasing nonwarranty replacement parts, but it can help us provide you with better products in the future.

Model # \_\_\_\_\_ Invoice # \_\_\_\_\_

Date \_\_\_\_\_ Location \_\_\_\_\_

Purchased \_\_\_\_\_ Purchased \_\_\_\_\_

LIST **HEATH**  
PART NUMBER

QTY.

PRICE  
EACHTOTAL  
PRICE

TOTAL FOR PARTS

HANDLING AND SHIPPING

MICHIGAN RESIDENTS ADD 4% TAX


TOTAL AMOUNT OF ORDER

SEND TO: **HEATH COMPANY**  
BENTON HARBOR  
MICHIGAN 49022  
ATTN: PARTS REPLACEMENT

Phone (Replacement parts only): 616 982-3571

THIS FORM IS FOR U.S. CUSTOMERS ONLY  
OVERSEAS CUSTOMERS SEE YOUR DISTRIBUTOR





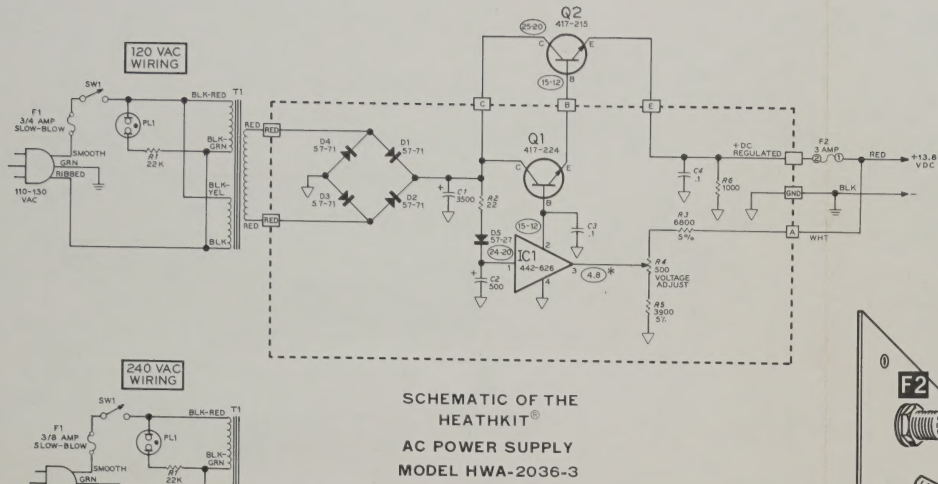

SCHEMATIC OF THE  
HEATHKIT®  
AC POWER SUPPLY  
MODEL HWA-2036-3

NOTES:

  1. RESISTOR VALUES ARE IN OHMS. ALL RESISTORS ARE 1/2 WATT.
2. CAPACITOR VALUES ARE IN  $\mu$ F.
3. THIS SYMBOL INDICATES A CONNECTION TO THE CIRCUIT BOARD.
4. THIS SYMBOL INDICATES DC VOLTAGES WITH 120 VAC SOURCE. VOLTAGES MAY VARY  $\pm 20\%$ . FIRST FIGURE IS TAKEN WITH NO LOAD. SECOND FIGURE IS TAKEN WITH 2.7A LOAD.
5. \* THIS VOLTAGE VARIES WITH THE SETTING OF CONTROL R4.



IC 1 FAIRCHILD 4A78MG  
1 INPUT (+)  
2 OUTPUT  
3 CONTROL  
4 COMMON



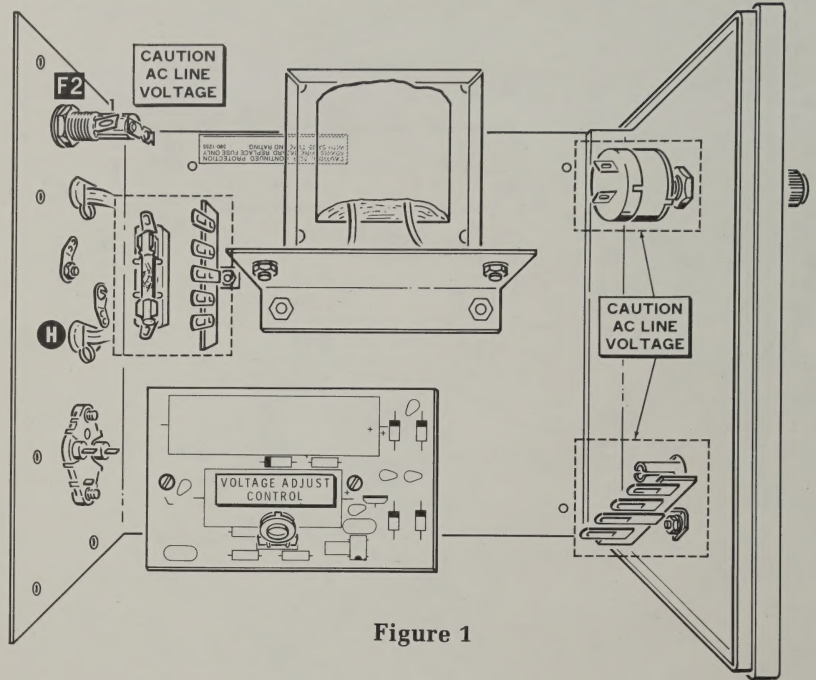


Figure 1


# ILLUSTRATION BOOKLET

## PARTS PICTORIAL

Part of 595-1943

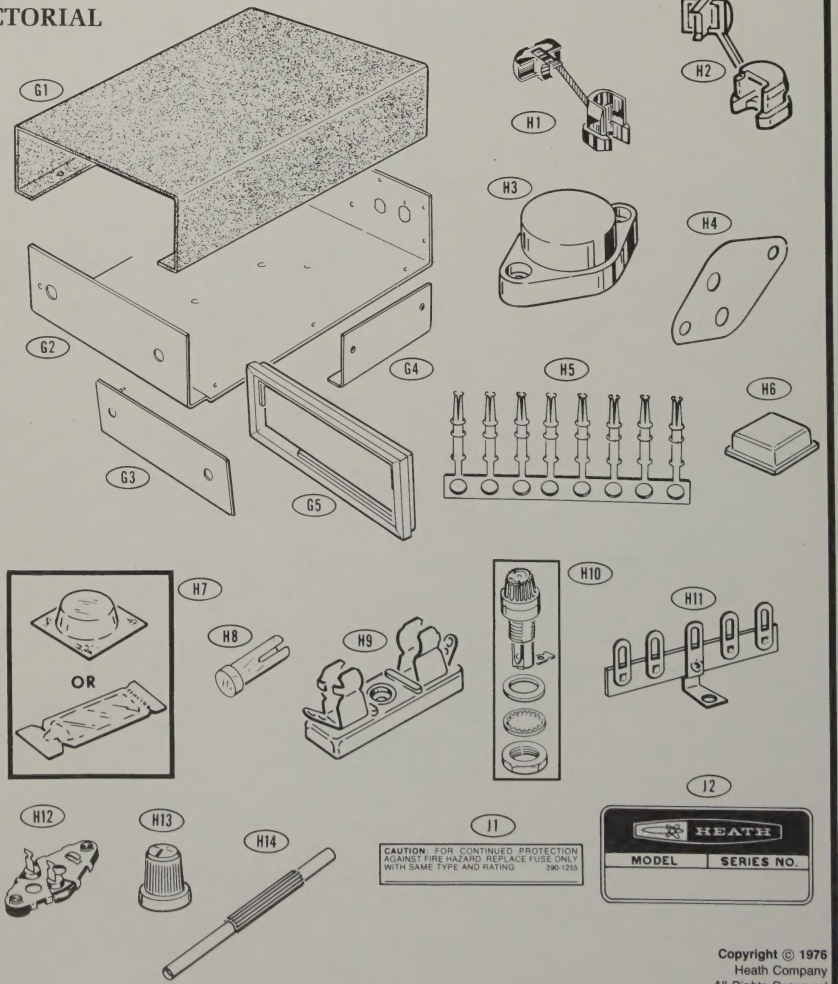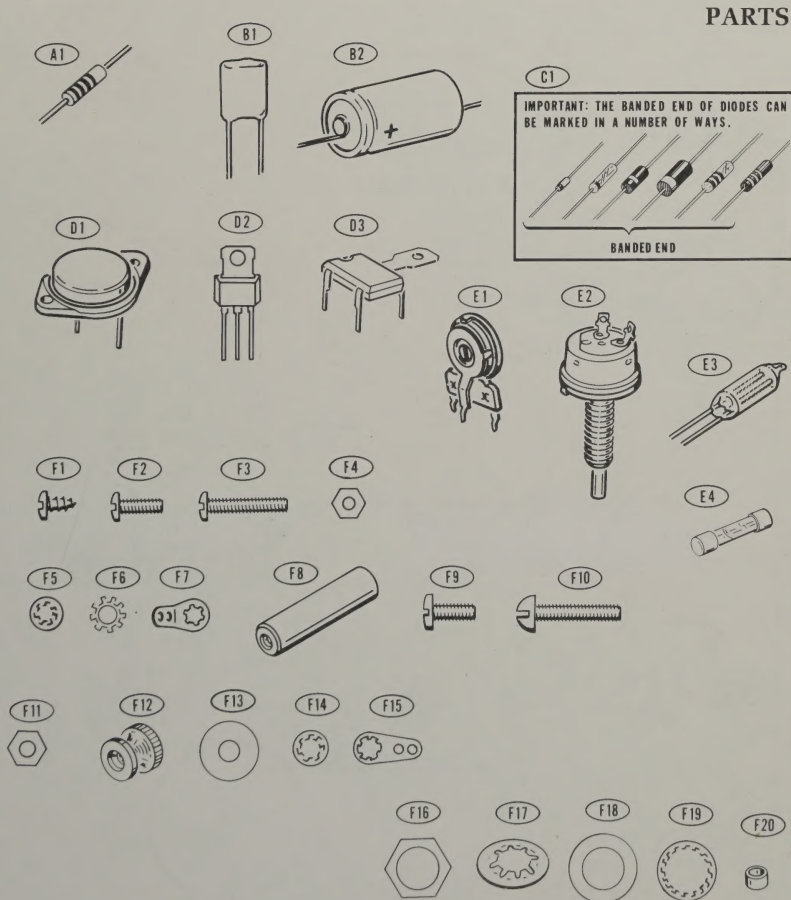




 
CAUTION: FOR CONTINUED PROTECTION  
AGAINST FIRE HAZARD, REPLACE FUSE ONLY  
WITH SAME TYPE AND RATING 390-1255



Model HWA-2036-3

Copyright © 1976  
Heath Company  
All Rights Reserved  
Printed in the United States of America



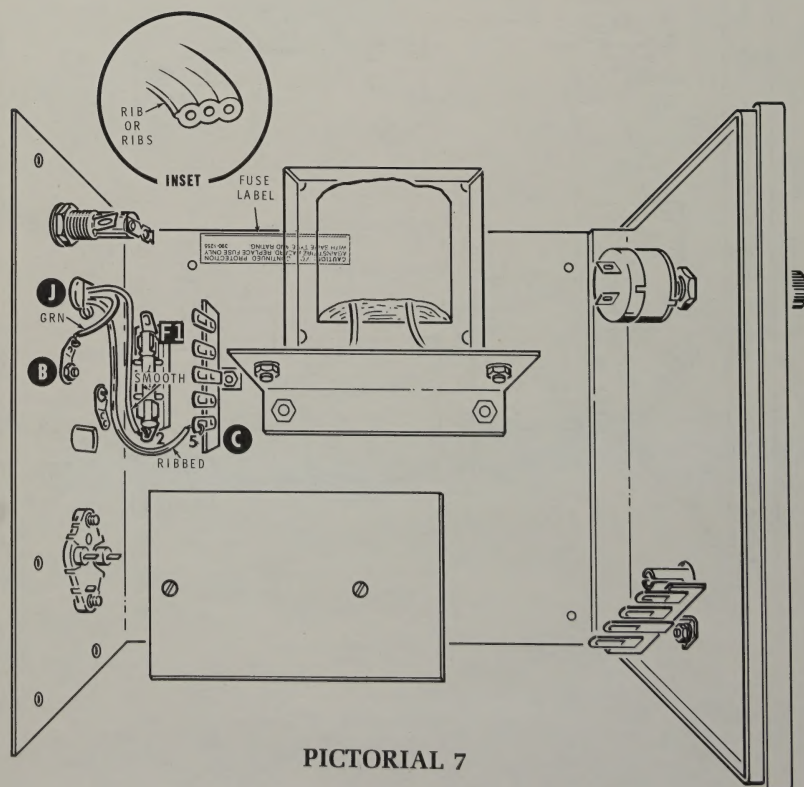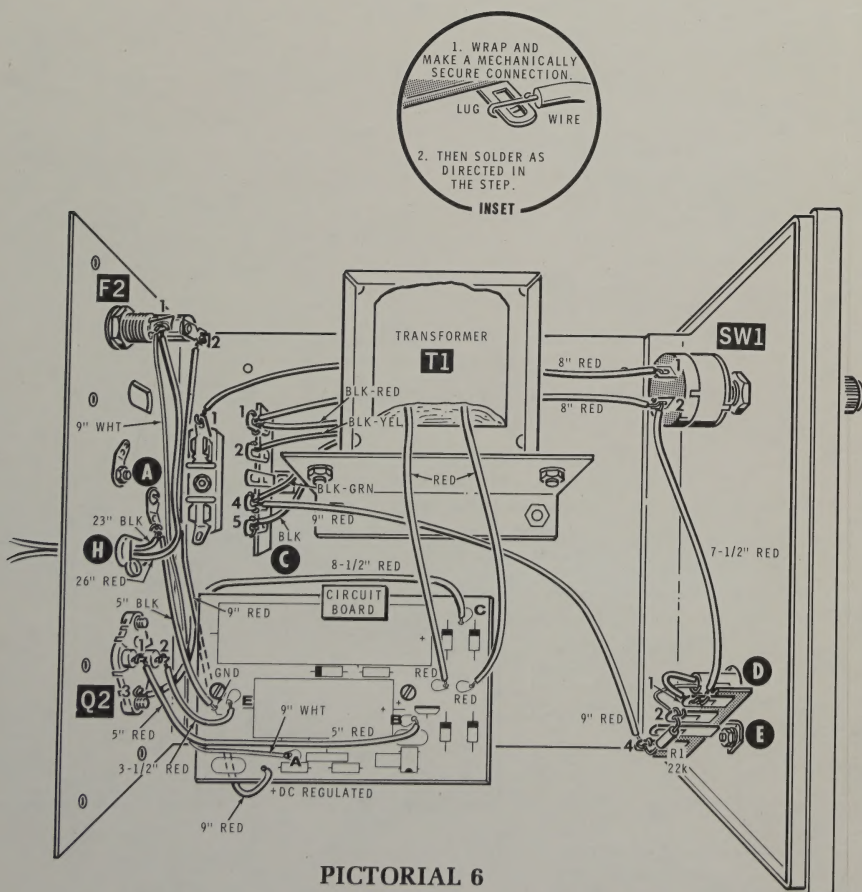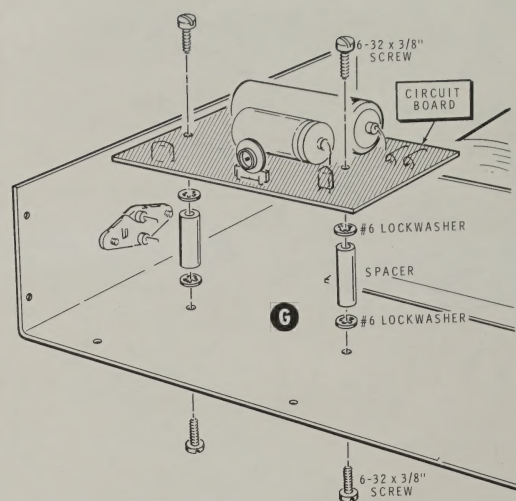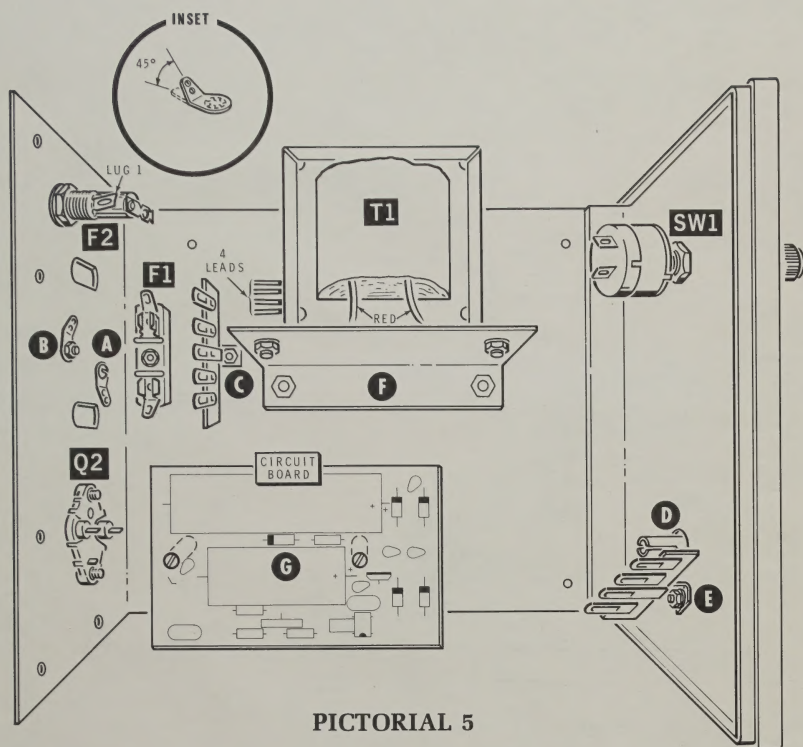



# CUSTOMER SERVICE

## REPLACEMENT PARTS

Please provide complete information when you request replacements from either the factory or Heath Electronic Centers. Be certain to include the **HEATH** part number exactly as it appears in the parts list.

Replacement parts are maintained specifically to repair Heath products. Parts sales for other reasons will be declined.

## ORDERING FROM THE FACTORY

Print all of the information requested on the parts order form furnished with this product and mail it to Heath. For telephone orders (parts only) dial 616 982-3571. If you are unable to locate an order form, write us a letter or card including:

- Heath part number.
- Model number.
- Date of purchase.
- Location purchased or invoice number.
- Nature of the defect.
- Your payment or authorization for COD shipment of parts not covered by warranty.

Mail letters to: Heath Company  
Benton Harbor  
MI 49022  
Attn: Parts Replacement

**Retain original parts until you receive replacements. Parts that should be returned to the factory will be listed on your packing slip.**

## OBTAINING REPLACEMENTS FROM HEATH ELECTRONIC CENTERS

For your convenience, "over the counter" replacement parts are available from the Heath Electronic Centers listed in your catalog. Be sure to bring in the original part and purchase invoice when you request a warranty replacement from a Heath Electronic Center.

## TECHNICAL CONSULTATION

Need help with your kit? — Self-Service? — Construction? — Operation? — Call or write for assistance, you'll find our Technical Consultants eager to help with just about any technical problem except "customizing" for unique applications.

The effectiveness of our consultation service depends on the information you furnish. Be sure to tell us:

- The Model number and Series number from the blue and white label.
- The date of purchase.
- An exact description of the difficulty.
- Everything you have done in attempting to correct the problem.

Also include switch positions, connections to other units, operating procedures, voltage readings, and any other information you think might be helpful.

**Please do not send parts for testing**, unless this is specifically requested by our Consultants.

Hints: Telephone traffic is lightest at midweek — please be sure your Manual and notes are on hand when you call.

Heathkit Electronic Center facilities are also available for telephone or "walk-in" personal assistance.

## REPAIR SERVICE

Service facilities are available, if they are needed, to repair your completed kit. (Kits that have been modified, soldered with paste flux or acid core solder, cannot be accepted for repair.)

**If it is convenient, personally deliver your kit to a Heathkit Electronic Center. For warranty parts replacement, supply a copy of the invoice or sales slip.**

If you prefer to ship your kit to the factory, attach a letter containing the following information directly to the unit:

- Your name and address.
- Date of purchase and invoice number.
- Copies of all correspondence relevant to the service of the kit.
- A brief description of the difficulty.
- Authorization to return your kit COD for the service and shipping charges. (This will reduce the possibility of delay.)

Check the equipment to see that all screws and parts are secured. (Do not include any wooden cabinets or color television picture tubes, as these are easily damaged in shipment. Do not include the kit Manual.) Place the equipment in a strong carton with at least **THREE INCHES** of resilient packing material (shredded paper, excelsior, etc.) on all sides. Use additional packing material where there are protrusions (control sticks, large knobs, etc.). If the unit weighs over 15 lbs., place this carton in another one with 3/4" of packing material between the two.

Seal the carton with reinforced gummed tape, tie it with a strong cord, and mark it "Fragile" on at least two sides. Remember, the carrier will not accept liability for shipping damage if the unit is insufficiently packed. Ship by prepaid express, United Parcel Service, or insured Parcel Post to:

Heath Company  
Service Department  
Benton Harbor, Michigan 49022

HEATH

Schlumberger

HEATH COMPANY • BENTON HARBOR, MICHIGAN  
***THE WORLD'S FINEST ELECTRONIC EQUIPMENT IN KIT FORM***

LITHO IN U.S.A.